

■ LIGHT AUTO TURN-OFF SYSTEM

- When the ignition key is turned from ON or ACC to LOCK position and the driver's door is opened with the taillights on, this system automatically turns them off.
- This system is controlled by the Driver side J/B ECU.

■ HEADLIGHT DELAY OFF SYSTEM

- This system is standard equipment on the model for Australia.
- When the headlights are illuminated through the operation of the light control switch or the activation of the automatic light control system, if the ignition switch is turned OFF and all the doors are closed, this system continues to illuminate the headlights for approximately 30 seconds, and then turns OFF the headlights.
- This system is controlled by the Driver side J/B ECU.

■ LIGHT REMINDER SYSTEM

- This system is standard equipment on the model for Europe.
- When the ignition key is turned from the ON or ACC to LOCK position while the driver's door open with the taillights or headlights turned on, this system warns the driver that the lights remain on by sounding the buzzer. The buzzer is located inside the combination meter.
- This system is controlled by the Meter ECU, which is located inside the combination meter.

■ SEAT BELT BUCKLE ILLUMINATION SYSTEM

- The seat belt buckles for the driver and front passenger seats and the outer belt buckles for the models with rear power seats are provided with illumination to improve their nighttime visibility.
- The seat belt buckle illumination for the driver and front passenger seats operates independently for each seat.
When the driver or the front passenger door is opened, the seat belt buckle for the driver or front passenger illuminates. Then, if the door is closed, the illumination will turn OFF in approximately 15 seconds.
- The driver seat belt buckle illumination is controlled by the Driver side J/B ECU, and the front passenger seat belt buckle illumination is controlled by the Passenger side J/B ECU.
- Both seat belt buckle illuminations for the rear outer seats illuminate simultaneously when one of the rear doors is opened. They turn OFF in approximately 15 seconds if both doors are closed.
- The illumination for the rear outer seat belt buckles is controlled by the Luggage room J/B ECU.