


■ CRUISE CONTROL SYSTEM

1. General

- Once the system is set to a desired vehicle speed, the engine throttle position is adjusted automatically to maintain the vehicle speed at that speed without depressing the accelerator pedal.
This system is standard equipment.
- With this system, the engine ECU directly controls the throttle valve to operate the vehicle at a fixed speed because it has adopted the ETCS-i (Electronic Throttle Control System-intelligent).
- The cruise control ECU is integrated with the engine ECU.

2. Layout of Components

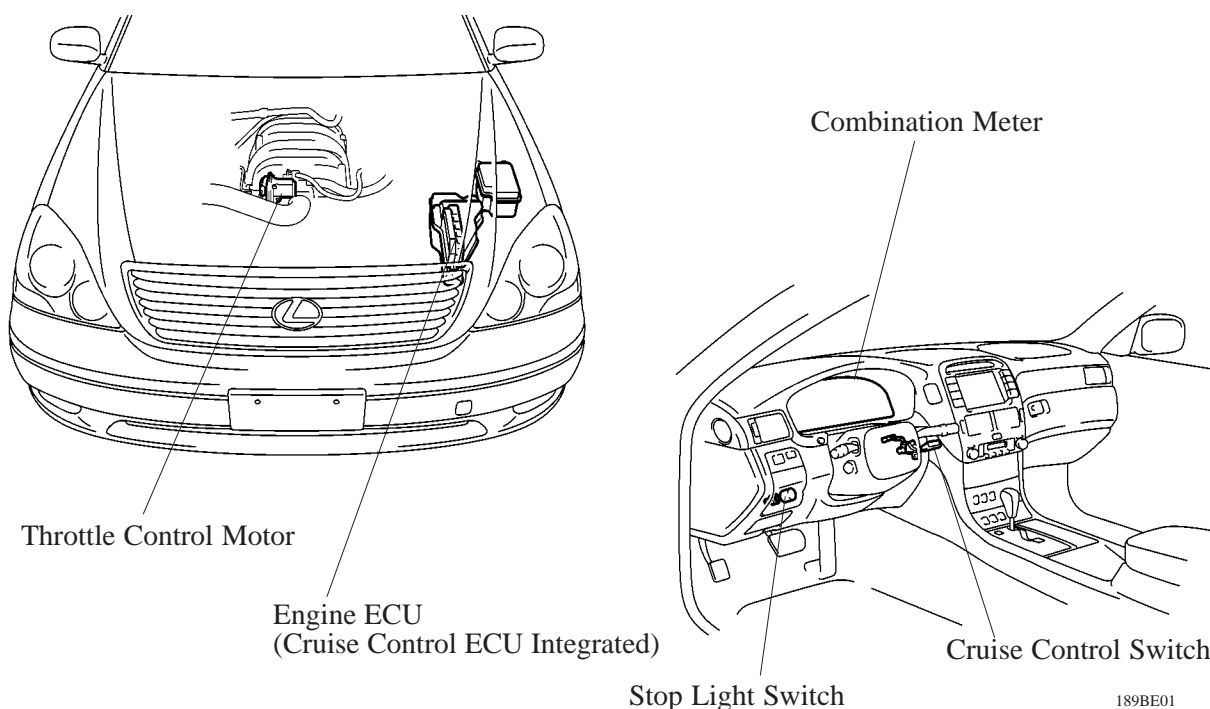

189BE01

3. Function

The ECU has the following functions.

1	Constant Speed Control	6	Low Speed Limit Control	11	Tap-Down Control
2	Set	7	High Speed Limit Control	12	Tap-Up Control
3	Coast	8	Automatic Transmission Control	13	Diagnosis
4	Accel	9	Manual Cancel	14	Fail Safe
5	Resume	10	Auto Cancel	—	