

## ■ TIRE PRESSURE WARNING SYSTEM

### 1. General

When the tire pressure warning system detects a drop in the tire inflation pressure while the vehicle is in motion, it warns the driver in the following manner.

Item		Warning Method
Combination Meter	Multi-information Display	Display warning message
	Master Warning Light	Turn ON
	Buzzer	Sounds once

- The tire pressure monitor ECU, which is enclosed in the skid control ECU, controls this system. The skid control ECU is integrated with the brake actuator.
- The tire pressure monitor ECU calculates the tire inflation pressure from the signals of each speed sensor.
- This system is standard equipment.

### ► System Diagram ◀

