

2. Multi-Information Display

The following warning messages have been added in the following systems.

► Added Warning Message ◀

System	Warning Message	Description	Buzzer	Master Warning Light
Tire Pressure Warning	Low Tire	This message appears when the tire inflation pressure has dropped.	○	Turn ON
	Check System	This message appears when a malfunction occurs in the tire pressure warning system.		
	Pressure Initial	This message appears when the tire pressure warning system has been initialized.		
Dynamic Laser Cruise Control*	Clean Radar Sensor	This message appears when the laser sensor in the dynamic laser cruise control system is dirty.	○	Turn ON
	Cruise not Available	This message appears to alert the driver that the dynamic laser cruise control is inoperative due to poor weather conditions (in the ECT SNOW mode or the sensor is exposed to direct sunlight).		
	Check Cruise System	This message appears when there is a malfunction in the dynamic laser cruise control system.		
	R/L -- . --° U/D -- . --°	This message indicates the adjustment angle of the laser sensor in the dynamic laser cruise control system.		
LEXUS Park Assist	Clean Park Sonar	For details, see the LEXUS park assist system on page 130 .	—	Turn ON

*: Only for Australia Model