


► Detection Area ◀

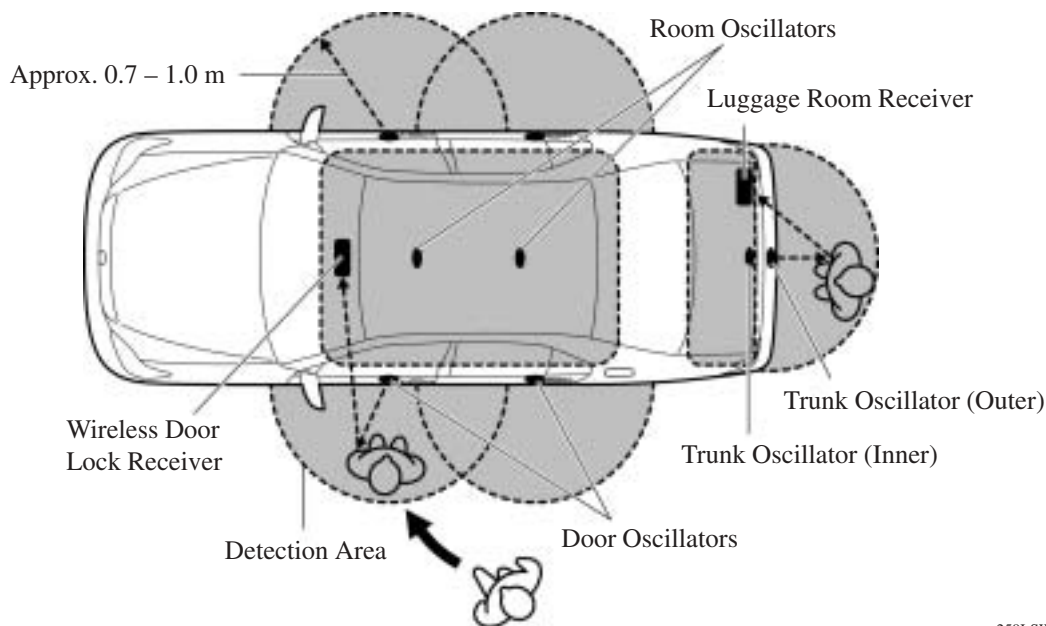

259LSW14

2. Feature of Smart Key System

Compared to the conventional key, the smart key system provides the following features.

Condition	Description		Feature
General	User has many keys.	Smart Key	There is no need to select the key because it suffices to merely have it in one's possession.
		Conventional Key	User must pull out the keys and select the appropriate key.
Unlock	User is about to enter the vehicle with a handful of luggage.	Smart Key	A door can be unlocked by merely touching its outside handle.
		Conventional Key	User must first set the luggage down in order to hold the key.
	User with the key in a briefcase is about to enter the vehicle.	Smart Key	A door can be unlocked by merely touching its outside handle inside.
		Conventional Key	User must look for the key before entering the vehicle. This is particularly inconvenient if it is dark outside or raining.
Lock	User is about to exit the vehicle with a handful of luggage.	Smart Key	A door can be locked by merely pressing the lock switch on the outside handle, without the use of a key.
		Conventional Key	User must hold the key while also holding the luggage, making it cumbersome to handle the key.
Engine Start	When ignition switch or starter switch is ON, or OFF.	Smart Key	There is no need to hold the key in one's hand.
		Conventional Key	User must hold the key and insert it into the key cylinder.

(Continued)

Trunk Open	User places luggage in the luggage compartment.	Smart Key	The luggage compartment door can be opened by merely pressing the smart trunk open.
		Conventional Key	User must first set the luggage down in order to hold the key.
	User with the key in a briefcase is about to open the luggage compartment door.	Smart Key	The luggage compartment door can be opened by merely pressing the smart trunk open.
		Conventional Key	User must look for the key before opening the luggage compartment door, which might be difficult if it is dark outside.
Memory Call	A user operates the memory system	Smart Key	The memory switch operation is not necessary. Automatically the driving position is set in accordance with each registered key ID.
		Conventional Key	Get into the vehicle and operate the memory switch.