

DTC	P1335/12,13	Crankshaft Position Sensor Circuit Malfunction (During engine running)
------------	--------------------	---

CIRCUIT DESCRIPTION

Refer to DTC P0335/12, 13 on page DI-84.

DTC No.	DTC Detecting Condition	Trouble Area
P1335/13	No crankshaft position sensor signal to engine ECU with engine speed 1,000 rpm or more	<ul style="list-style-type: none"> • Open or short in crankshaft position sensor circuit • Crankshaft position sensor • Crankshaft timing pulley • Engine ECU

WIRING DIAGRAM

Refer to DTC P0335/12, 13 on page DI-84.

INSPECTION PROCEDURE

HINT:

Refer to DTC P0335/12, 13 on page DI-84.