



OK

Check and replace engine ECU (See page IN-35).

NG

2 Check check engine warning light.

See combination meter troubleshooting (See page BE-14).

NG

Repair or replace bulb or combination meter assembly.

OK

3 Check that engine ECU connectors are securely connected to engine ECU.

NO

Connect connector to engine ECU.

YES

Check for open circuit in harness and connector between combination meter and engine ECU (See page IN-35).

4 Check operation of check engine warning light (See step 1).

OK

Check and replace engine ECU (See page IN-35).

NG

5 Is DTC output?

Check DTC on [page DI-4](#).

YES

Repair circuit indicated by output code.

NO

6 Check ignition relay (Marking: IG1).

NG

Replace IG1 relay.

OK

Check for short circuit in harness and connector between DLC3 and engine ECU ([See page IN-35](#)).