

<b>DTC</b>	<b>C1201 51</b>	<b>Engine Control System Malfunction</b>
------------	-----------------	--

## CIRCUIT DESCRIPTION

If trouble occurs in the engine control system, the ECU prohibits TRC and VSC control.

DTC No.	DTC Detecting Condition	Trouble Area
C1201 51	At the engine speed of 500 rpm, a trouble signal in the engine control system continues for 5 sec. or more.	Engine control system

## INSPECTION PROCEDURE

1	Check the DTC for the engine (See page DI-4).
---	---

\*1

Repair engine control system according to the code output.

\*2

Check for engine and ECT ECU connected to malfunction indicator light.

\*1: Output NG code

\*2: Malfunction indicator light remains ON