

## DIAGNOSTIC TROUBLE CODE CHART

If a DTC is displayed during the DTC check, check the circuit for that code listed in the table below. For details of each code, turn the page referred to under the "See page" for the respective "DTC No." in the DTC chart.

DTC No. (See Page)	Detection Item	Trouble Area
B2602 (DI-463)	Key unlock warning switch malfunction	Key unlock warning switch
B2610 (DI-464)	Tilt position sensor or tilt motor malfunction	<ul style="list-style-type: none"> <li>• Sensor power source circuit</li> <li>• Actuator power source circuit</li> <li>• Tilt motor circuit</li> <li>• Power tilt and power telescopic ECU</li> </ul>
B2611 (DI-466)	Telescopic position sensor or telescopic motor malfunction	<ul style="list-style-type: none"> <li>• Sensor power source circuit</li> <li>• Actuator power source circuit</li> <li>• Telescopic motor circuit</li> <li>• Power tilt and power telescopic ECU</li> </ul>
B2620 (DI-468)	ECU power source circuit malfunction	<ul style="list-style-type: none"> <li>• Battery</li> <li>• ECU power source circuit</li> <li>• Power tilt and power telescopic ECU</li> </ul>
B2621 (DI-470)	Communication interruption	<ul style="list-style-type: none"> <li>• Multiplex communication system</li> <li>• Power tilt and power telescopic ECU</li> </ul>