


## TERMINALS OF ECU

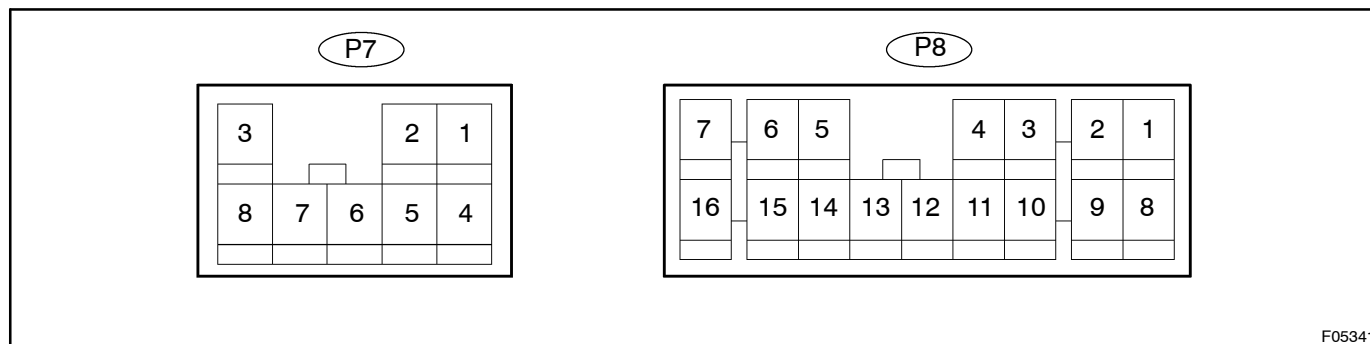

F05341

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
A2 (P8-1) – COM2 (P8-9)	B – G	IG switch ON, telescopic extended or contracted by manual switch	190 – 230 (AC)
+B (P8-4) – GND (P7-6)	L-W – W-B	Always	10 – 14 (DC)
A1 (P8-7) – COM1 (P8-15)	B – G	IG switch ON, tilt up or down by manual switch	190 – 230 (AC)
B2 (P8-8) – COM2 (P8-9)	W – G	IG switch ON, telescopic extended or contracted by manual switch	190 – 230 (AC)
S5V2 (P8-12) – SG2 (P8-10)	W-R – W-L	IG switch ON	4.5 – 5.5 (DC)
S5V1 (P8-13) – SG1 (P8-14)	B-L – Y	IG switch ON	4.5 – 5.5 (DC)
B1 (P8-16) – COM1 (P8-15)	W – G	IG switch ON, tilt up or down by manual switch	190 – 230 (AC)
ECUB (P7-1) – GND (P7-6)	R-B – W-B	Always	10 – 14 (DC)
IG (P7-4) – GND (P7-6)	R-L – W-B	IG switch ON	10 – 14 (DC)
		IG switch LOCK	Below 1 (DC)

### NOTICE:

To distinguish trouble and replace it, take necessary electrical shock prevention operation.