


## Slide Power Seat Motor Circuit

### CIRCUIT DESCRIPTION

The Rear LH Seat ECU receives the slide position signal of the rear power seat switch to operate the slide power seat motor.

### WIRING DIAGRAM

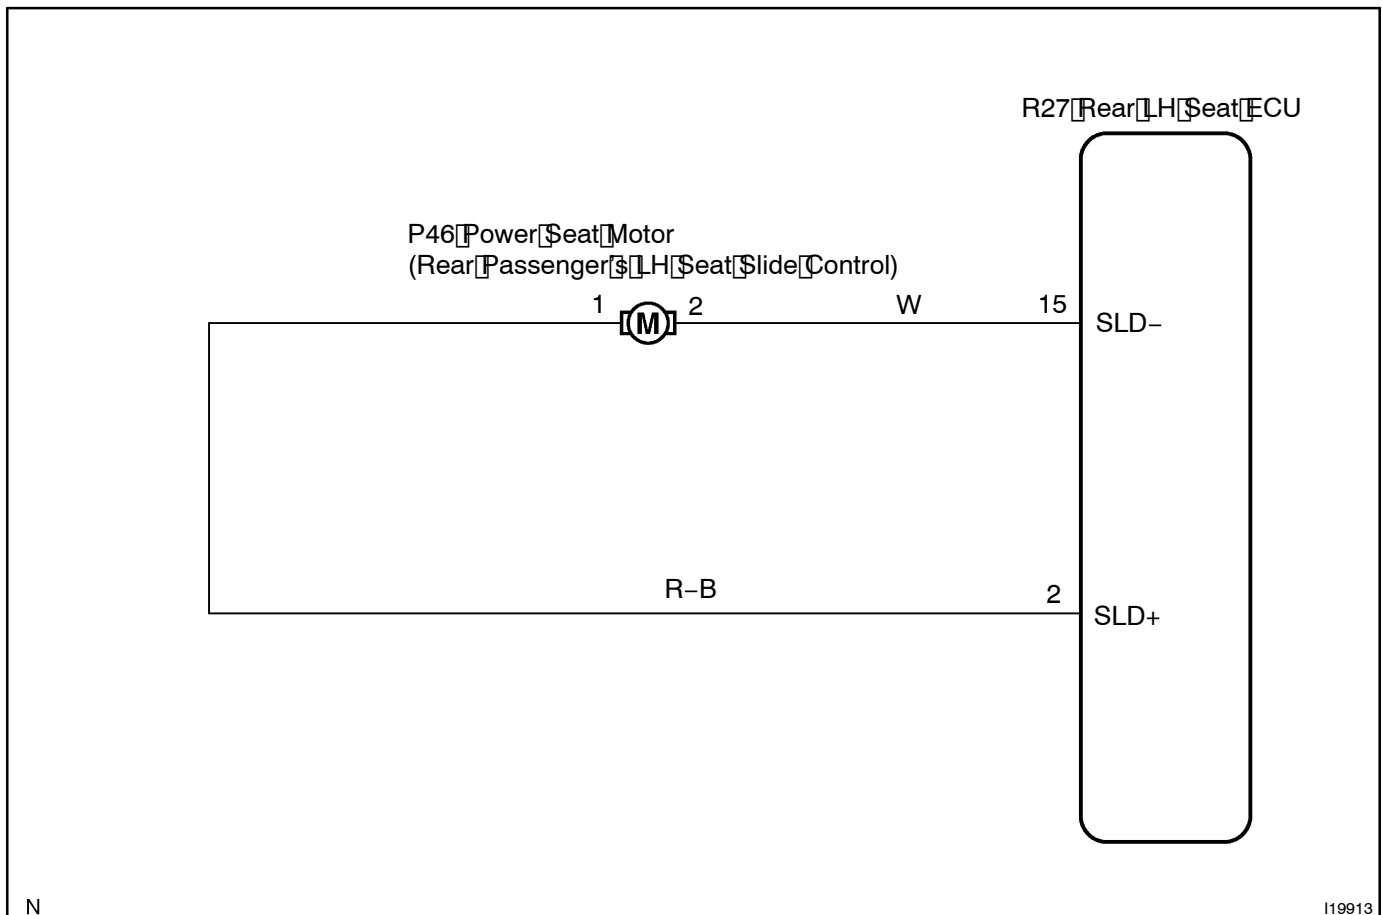

### INSPECTION PROCEDURE

#### HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

- 1 Check the slide power seat motor using LEXUS hand-held tester.

#### PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

#### CHECK:

Check the slide power seat motor using ACTIVE LIST.

OK

Proceed to next circuit inspection shown on problem symptom table (See page DI-742).

NG

2 Check slide power seat motor (See page BE-131).

NG

Replace motor.

OK

3 Check slide position sensor (See page BE-131).

NG

Replace power seat motor.

OK

4 Check harness and connectors between rear LH seat ECU and slide motor and position sensors, sensors and body ground (See page IN-35).

OK

Repair or replace harness or connectors.

NG

Check and replace rear LH seat ECU (See page IN-35).