

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Rear right side power seat system does not operate.	<ol style="list-style-type: none"> 1. ECU power source circuit 2. Rear seat switch circuit 3. Rear right seat control ECU 	DI-766 DI-790 IN-35
"Slide operation" does not operate.	<ol style="list-style-type: none"> 1. Rear seat switch circuit 2. Motor circuit 3. Position sensor circuit 4. Rear right seat control ECU 	DI-790 DI-768 DI-775 IN-35
"Headrest operation" does not operate.	<ol style="list-style-type: none"> 1. Rear seat switch circuit 2. Motor circuit 3. Headrest limit switch circuit 4. Position sensor circuit 5. Rear right seat control ECU 	DI-790 DI-770 DI-773 DI-770 IN-35
Seat position memory function does not operate.	<ol style="list-style-type: none"> 1. Rear seat switch circuit 2. Rear seat memory switch 3. Position sensor circuit 4. Rear left seat control ECU 5. Rear Door RH ECU 	DI-790 DI-1037 DI-775 IN-35 IN-35
Seat position return function does not operate.	<ol style="list-style-type: none"> 1. Rear seat switch circuit 2. Rear seat turn switch circuit 3. Rear right seat control ECU 4. Passenger side J/B ECU 	DI-790 DI-1087 IN-35 IN-35
Door open return function does not operate.	<ol style="list-style-type: none"> 1. Rear seat switch circuit 2. Door courtesy switch circuit 3. Rear right seat control ECU 	DI-790 DI-1019 IN-35
Vibration seat function does not operate.	<ol style="list-style-type: none"> 1. Rear seat switch circuit 2. Vibration seat ECU communication circuit 3. Vibration circuit 4. Rear right seat control ECU 	DI-790 DI-777 DI-780 IN-35