


Slide Power Seat Motor Circuit

CIRCUIT DESCRIPTION

The Rear RH Seat ECU receives the slide position signal of the rear power seat switch to operate the slide power seat motor.

WIRING DIAGRAM

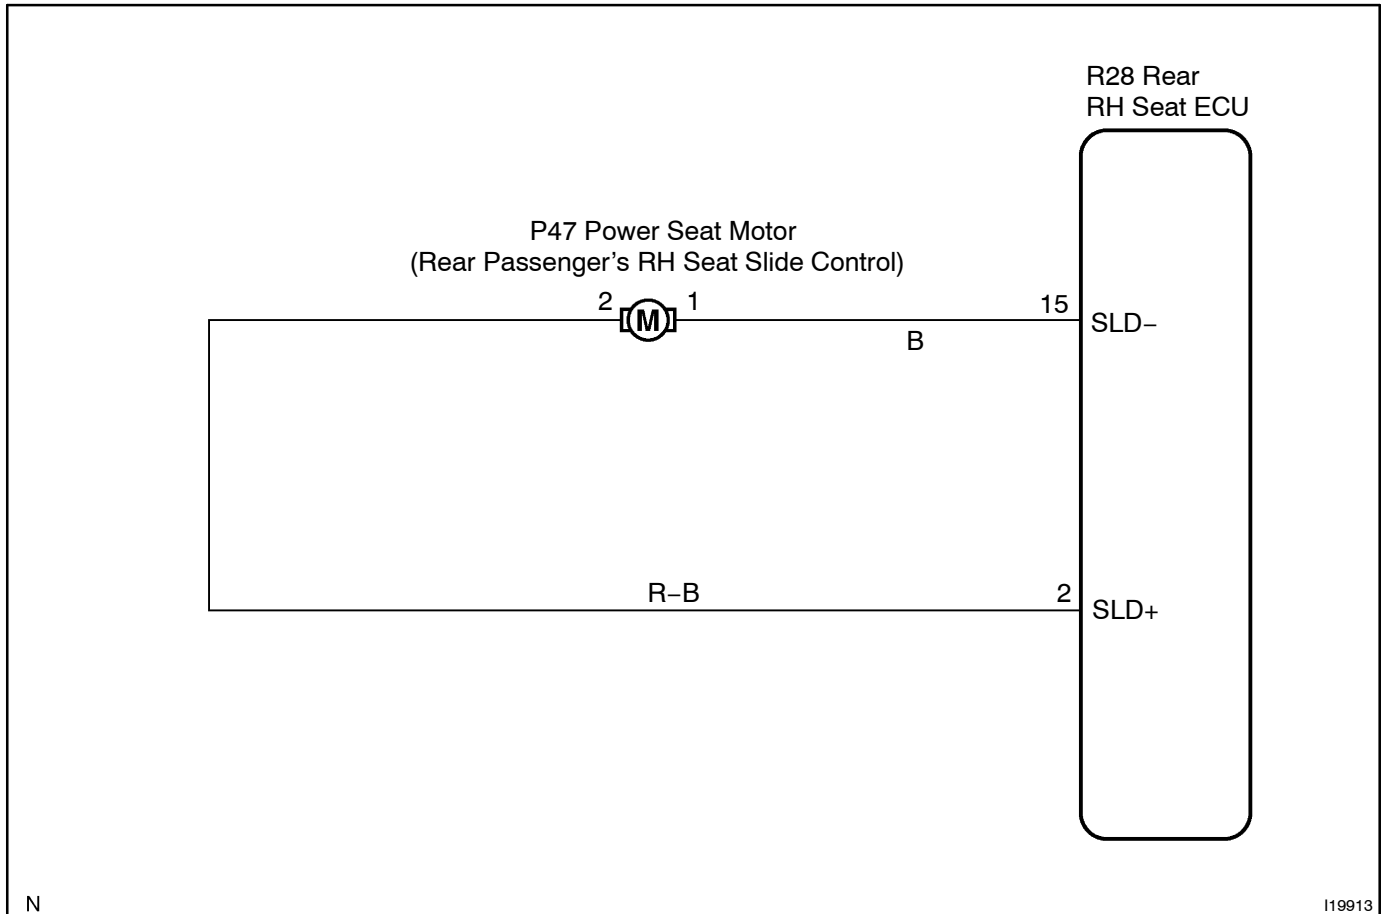

INSPECTION PROCEDURE**HINT:**

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1 Check slide power seat motor using LEXUS hand-held tester.

PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

CHECK:

Check the slide power seat motor using ACTIVE LIST.

OK

Proceed to next circuit inspection shown on problem symptom table (See page DI-765).

NG

2 Check slide power seat motor (See page BE-131).

NG

Replace motor.

OK

3 Check harness and connectors between rear RH seat ECU and slide motor (See page N-35).

OK

Repair or replace harness or connectors.

NG

Check and replace rear RH seat ECU (See page N-35).