

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Main switch cannot be turned ON. (Cruise indicator light and CRUISE display in combination meter are not lit.)	3. Cruise control switch circuit 4. Spiral cable 5. Wire harness 6. Engine system 7. Combination meter system	DI-870 DI-482 IN-35 DI-1 DI-930
Vehicle speed setting cannot be done. (Although indicator light and CRUISE are lit when the main switch is turned ON, they go off when vehicle speed is set.)	1. Cruise control switch circuit 2. Spiral cable 3. Wire harness 4. Engine system	DI-870 DI-482 IN-35 DI-1
Setting cannot be done. (Indicator lamp and CRUISE are lit when the main switch is turned ON and they remain ON while setting.)	1. Cruise control switch circuit 2. Spiral cable 3. Stop light switch circuit 4. Neutral start switch circuit 5. Wire harness 6. Engine system 7. Combination meter system	DI-870 DI-482 DI-864 DI-863 IN-35 DI-1 DI-930
While the vehicle is driving with cruise control, the set control is canceled. (Indicator light and CRUISE remain ON.)	1. Cruise control switch circuit 2. Spiral cable 3. Stop light switch circuit 4. Neutral start switch circuit 5. Wire harness 6. Engine system 7. Combination meter system	DI-870 DI-482 DI-864 DI-230 IN-35 DI-1 DI-930
Hunting (Speed is not constant.)	1. Vehicle speed sensor circuit 2. Engine system	DI-863 DI-1
Setting cannot be cancelled. (When Coast, Acceleration, Resume, Set speed change and Control switch are operated.)	1. Cruise control switch circuit 2. Spiral cable 3. Wire harness 4. Engine system	DI-870 DI-482 IN-35 DI-1
No display.	1. Combination meter system 2. Engine system	DI-930 DI-1