

**CIRCUIT INSPECTION**

<b>DTC</b>	<b>P0500/21,23</b>	<b>Vehicle Speed Sensor Circuit</b>
------------	--------------------	-------------------------------------

**CIRCUIT DESCRIPTION**

[See page DI-95](#)

DTC No.	Detection Item	Trouble Area
P0500/21,23	Speed signal is not input to the Engine and ECT ECU while cruise control is set.	<ul style="list-style-type: none"> <li>• Combination meter</li> <li>• Harness or connector between Engine and ECT ECU and vehicle speed sensor</li> <li>• Vehicle speed sensor</li> <li>• Engine and ECT ECU</li> </ul>

**WIRING DIAGRAM**

[See page DI-95](#)

**INSPECTION PROCEDURE**

[See page DI-95](#)