DI8S4-01

CRUISE[MAIN[Indicator[Light[Circuit

CIRCUIT DESCRIPTION

When the cruise control main witch sturned N, CRUISE MAIN indicator fight fights up.

INSPECTION PROCEDURE

1 Check combination meter See page DI-930).

NG

Replace combination meter.

OK

Proceed to next circuit inspection shown on problem[symptoms[table[See[page DI-862).