



PRE-CHECK

1. DTC CHECK (Using LEXUS hand-held tester)

- (a) Prepare the LEXUS hand-held tester.
- (b) Connect the LEXUS hand-held to DLC3.
- (c) Turn the ignition switch ON and the LEXUS hand-held tester main switch ON.
- (d) Use the LEXUS hand-held tester to check the DTCs, note them down. (For opening instructions, see the LEXUS hand-held tester's instruction book).
- (e) See page DI-876 to confirm the details of the DLC3.

2. DTC CLEARANCE

DTC will be cleared when the trouble output as DTC is recovered normally.

PAST CODE: Clear it using the LEXUS hand-held tester.