


## TERMINALS OF ECU

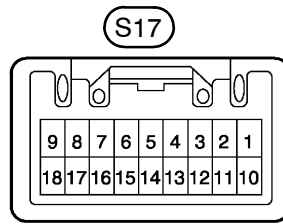

T

I20411

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
S17-1 - S17-9 (CPUB - GND)	V-Y - W-B	Constant	10 - 14 V
S17-2 - S17-9 (IG2 - GND)	B - W-B	Ignition switch ON	10 - 14 V
S17-3 - S2-9 (P2SW - GND)	LG - W-B	Shift position P	3 V or more
S17-4 (EFI)	GR-R	Engine and ECT ECU communication circuit	-
*S17-6 (MPX2)	P-L	Multiplex communication circuit	-
S17-7 - S17-9 (VC5 - GND)	R - W-B	Ignition key inserted (Transponder key ECU communication circuit)	5 V (Pulse is generated)
S17-8 - S17-9 (RXCK - GND)	L-W - W-B	Ignition key inserted (Transponder key ECU communication circuit)	5 V (Pulse is generated)
S17-9 - Body ground (GND - Body ground)	W-B - Body ground	Constant	Below 1 V
S17-10 - S17-9 (+B - GND)	R-L - W-B (LHD) B-L-W-B (RHD)	Constant	10 - 14 V
S17-11 - S17-9 (PUSH - GND)	P-B - W-B	Push switch push ON	Below 1 V
S17-12 - S17-9 (KSW - GND)	LG-B - W-B	Key switch ON (Ignition key inserted)	Below 1 V
S17-13 (EFIO)	GR-G	Engine and ECT ECU communication circuit	-
S17-15 (MPX1)	P-L	Multiplex communication circuit	-
S17-16 - S17-9 (TXCT - GND)	Y-B - W-B	Ignition key inserted (Transponder key ECU communication circuit)	5 V (Pulse is generated)
S17-17 - S17-9 (CODE - GND)	O - W-B	Ignition key inserted (Transponder key ECU communication circuit)	5 V (Pulse is generated)
S17-18 - Body ground) AGND - Body ground)	V - Body ground	Constant	Below 1 V