

PROBLEM SYMPTOMS TABLE**GAUGE:**

Symptom	Suspect Area	See page
Speedometer does not operate or operates abnormally.	1. Speedometer circuit 2. Speed sensor circuit 3. Combination meter	DI-937 DI-945 IN-35
Tachometer does not operate or operates abnormally.	1. Tachometer circuit 2. Igniter signal circuit 3. Combination meter	DI-939 DI-947 IN-35
Fuel gauge does not operate or operates abnormally.	1. Fuel gauge circuit 2. Combination meter	DI-941 IN-35
Water temperature does not operate or operates abnormally.	1. Water temperature gauge circuit 2. Combination meter	DI-943 IN-35

INDICATOR LIGHT AND WARNING LIGHT:

Symptom	Suspect Area	See page
Shift indicator lights does not light up.	1. Bulb circuit 2. Neutral start switch circuit 3. Transmission switch circuit 4. Combination meter	DI-951 DI-230 DI-242 IN-35
Open door warning light does not light up.	1. Bulb circuit 2. Door courtesy switch circuit 3. Combination meter	DI-951 DI-1227 IN-35
Passenger seat belt warning light does not light up.	1. Bulb circuit 2. Passenger seat belt buckle switch circuit 3. Combination meter	DI-951 DI-1095 IN-35
Driver seat belt warning light does not light up.	1. Bulb circuit 2. Driver seat belt buckle switch circuit 3. Combination meter	DI-951 DI-1045 IN-35
Low oil pressure warning light does not light up.	1. Bulb circuit 2. Low oil pressure warning switch circuit 3. Combination meter	DI-951 BE-73 IN-35
Discharge warning light does not light up.	1. Bulb circuit 2. Alternator circuit 3. Combination meter	DI-951 CH-9 IN-35
Brake warning light does not light up.	1. Bulb circuit 2. Brake fluid level warning switch circuit 3. Combination meter	DI-951 DI-443 IN-35
Headlight indicator light does not light up.	1. Bulb circuit 2. Headlight system 3. Combination system	DI-951 DI-1003 IN-35
Taillight indicator light does not light up.	1. Bulb circuit 2. Taillight system 3. Combination meter	DI-951 DI-1003 IN-35
CRUISE MAIN indicator light does not light up.	1. Bulb circuit 2. Cruise control switch circuit 3. Combination meter	DI-951 DI-870 IN-35
ECT SNOW indicator light does not light up.	1. Bulb circuit 2. ECT pattern select switch circuit 3. Combination meter	DI-951 DI-240 IN-35

DIAGNOSTICS – COMBINATION METER SYSTEM

ECT PWR indicator light does not light up.	1. Bulb circuit 2. ECT pattern select switch circuit 3. Combination meter	DI-951 DI-240 IN-35
VSC OFF indicator light does not light up.	1. Bulb circuit 2. VSC system 3. Combination meter	DI-951 DI-339 IN-35
Washer fluid level warning light does not light up.	4. Bulb circuit 5. Washer fluid level warning switch circuit 6. Combination meter	DI-951 DI-1183 IN-35
Rear lights warning light does not light up.	1. Bulb circuit 2. Luggage room J/B system 3. Combination meter	DI-951 DI-1104 IN-35
Engine oil level warning light does not light up.	1. Bulb circuit 2. Engine oil level warning switch circuit 3. Combination meter	DI-951 BE-73 IN-35
Fuel level warning light does not light up.	1. Bulb circuit 2. Fuel level warning switch circuit 3. Combination meter	DI-951 DI-1139 IN-35
Rear fog light indicator light does not light up.	1. Bulb circuit 2. Rear fog light switch circuit 3. Combination meter	DI-951 DI-965 IN-35
High-beam indicator light does not light up.	1. Bulb circuit 2. Light control switch circuit 3. Headlight circuit 4. Combination meter	DI-951 DI-965 DI-1171 IN-35
SRS warning light does not light up.	1. Bulb circuit 2. Airbag sensor assembly 3. Combination meter	DI-951 DI-482 IN-35
Malfunction indicator light does not light up.	1. Bulb circuit 2. Engine system 3. Combination meter	DI-951 DI-1 IN-35
Slip indicator light does not light up.	1. Bulb circuit 2. TRAC system 3. Combination system	DI-951 DI-339 IN-35
TRC OFF indicator light does not light up.	1. Bulb circuit 2. TRAC system 3. Combination system	DI-951 DI-339 IN-35
ABS warning light does not light up.	1. Bulb circuit 2. ABS system 3. Combination meter	DI-951 DI-339 IN-35
Front fog light indicator light does not light up.	1. Bulb circuit 2. Front fog light switch circuit 3. Combination meter	DI-951 DI-955 IN-35
VSC warning light does not light up.	1. Bulb circuit 2. VSC system 3. Combination meter	DI-951 DI-339 IN-35
Headlight beam leveling indicator light does not light up.	1. Bulb circuit 2. Headlight beam level control system 3. Combination meter	DI-951 BE-40 IN-35
All warning indicator does not light up.	1. Combination meter power source circuit 2. Combination meter	DI-949 IN-35

MULTI-INFORMATION DISPLAY:

Symptom	Suspect Area	See page
"RADAR CRUISE READY" indicator light does not light up.	1. Multi-information circuit 2. Cruise control switch circuit 3. Combination meter	DI-953 DI-870 IN-35
"CHECK CRUISE SYSTEM" indicator light does not light up.	1. Multi-information circuit 2. Cruise control switch circuit 3. Combination meter	DI-953 DI-870 IN-35
"ODO/TRIP" indicator light does not light up.	1. Multi-information circuit 2. ODO/TRIP switch circuit 3. Combination meter	DI-953 BE-73 IN-35
All warning indicator does not sound.	1. Combination meter power source circuit 2. Combination meter	DI-949 IN-35

BUZZER:

Symptom	Suspect Area	See page
Key remainder buzzer does not sound.	1. Buzzer circuit 2. Key unlock warning switch circuit (w/o smart key) (w/ smart key) 3. Driver door courtesy switch circuit 4. Combination meter	DI-952 DI-889 DI-908 DI-1227 IN-35
Light remainder buzzer does not sound.	1. Buzzer circuit 2. Key unlock warning switch circuit (w/o smart key) (w/ smart key) 3. Driver door courtesy switch circuit 4. Combination meter	DI-952 DI-889 DI-908 DI-1227 IN-35
Seat belt warning buzzer does not sound.	1. Buzzer circuit 2. Seat belt buckle switch circuit 3. Combination meter	DI-952 DI-1045 IN-35
Reverse warning buzzer does not sound.	1. Buzzer circuit 2. Neutral start switch circuit 3. Combination meter	DI-952 DI-230 IN-35
Speed warning buzzer does not sound.	1. Buzzer circuit 2. Speedometer circuit 3. Speed sensor signal circuit 4. Combination meter	DI-952 DI-937 DI-945 IN-35
All warning buzzer does not sound.	1. Combination meter power source circuit 2. Combination meter	DI-949 IN-35