

## Bulb Circuit

### CIRCUIT DESCRIPTION

Some warnings and indicators on the combination meter can be active-tested with the LEXUS hand-held tester.

The procedure is as follows:

### INSPECTION PROCEDURE

HINT:

If there is not the LEXUS hand-held tester, begin with STEP 2.

1 Perform active test.

#### PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

#### CHECK:

- (a) Enter ACTIVE TEST function of the LEXUS hand-held tester.
- (b) Check that light turns ON or OFF as the LEXUS hand-held tester directs.

HINT:

All lights flash except the shift indicator.

OK

Proceed to next circuit inspection shown on problem symptom table (See page DI-934).

NG

2 Check circuit plate (See page IN-35).

NG

Replace circuit plate.

OK

Check and replace combination meter (See page IN-35).