

Buzzer

INSPECTION PROCEDURE

HINT:

If there is not the LEXUS hand-held tester, begin with STEP 2.

1 Perform active test.

PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

CHECK:

- (a) Enter into ACTIVE TEST function of LEXUS hand-held tester.
- (b) Check that buzzer sound as the LEXUS hand-held tester directs.

OK

Proceed to next circuit inspection shown on problem symptom table (See page DI-934).

NG

2 Check circuit plate (See page BE-73).

NG

Replace circuit plate.

OK

Check and replace combination meter (See page N-35).