

**PROBLEM SYMPTOMS TABLE****HEADLIGHT AND TAILLIGHT SYSTEM:**

Symptom	Suspect Area	See page
"LO-beam" headlight does not light up.	<ol style="list-style-type: none"> <li>3. Headlight relay circuit</li> <li>1. Light control switch circuit</li> <li>2. Combination switch</li> <li>3. Driver side J/B control ECU</li> </ol>	<a href="#">DI-1049</a> <a href="#">DI-965</a> <a href="#">IN-35</a> <a href="#">IN-35</a>
"HI-beam" headlight does not light up.	<ol style="list-style-type: none"> <li>1. Headlight (HI-beam) circuit</li> <li>2. Light control switch circuit</li> <li>3. Combination switch</li> <li>4. Front light ECU</li> <li>5. Driver side J/B control ECU</li> </ol>	<a href="#">DI-1171</a> <a href="#">DI-965</a> <a href="#">IN-35</a> <a href="#">IN-35</a> <a href="#">IN-35</a>
"Flash" headlight does not light up.	<ol style="list-style-type: none"> <li>1. Headlight (HI-beam) circuit</li> <li>2. Light control switch circuit</li> <li>3. Combination switch</li> <li>4. Front light ECU</li> <li>5. Driver side J/B control ECU</li> </ol>	<a href="#">DI-1171</a> <a href="#">DI-965</a> <a href="#">IN-35</a> <a href="#">IN-35</a> <a href="#">IN-35</a>
Headlight is dark.	<ol style="list-style-type: none"> <li>1. Light control switch circuit</li> <li>2. Combination switch</li> <li>3. Driver side J/B control ECU</li> </ol>	<a href="#">DI-965</a> <a href="#">IN-35</a> <a href="#">IN-35</a>
Headlight does not light up or has abnormal operation.	<ol style="list-style-type: none"> <li>1. Light control switch circuit</li> <li>2. Combination switch</li> <li>3. Driver side J/B control ECU</li> </ol>	<a href="#">DI-965</a> <a href="#">IN-35</a> <a href="#">IN-35</a>
Taillight does not light up or has abnormal operation.	<ol style="list-style-type: none"> <li>1. Taillight circuit</li> <li>2. Light control switch circuit</li> <li>3. Combination switch</li> <li>4. Luggage room J/B ECU</li> <li>5. Driver side J/B control ECU</li> </ol>	<a href="#">DI-1174</a> <a href="#">DI-965</a> <a href="#">IN-35</a> <a href="#">IN-35</a> <a href="#">IN-35</a>

**FOG LIGHT SYSTEM:**

Symptom	Suspect Area	See page
Fog light does not light up or has abnormal operation.	<ol style="list-style-type: none"> <li>1. Front fog light circuit</li> <li>2. Light control switch circuit</li> <li>3. Combination switch</li> <li>4. Front light ECU</li> <li>5. Driver side J/B control ECU</li> </ol>	<a href="#">DI-1174</a> <a href="#">DI-965</a> <a href="#">IN-35</a> <a href="#">IN-35</a> <a href="#">IN-35</a>

**TURN SIGNAL LIGHT SYSTEM:**

Symptom	Suspect Area	See page
Turn signal light does not light up.	<ol style="list-style-type: none"> <li>1. Turn signal light circuit</li> <li>2. Light control switch circuit</li> <li>3. Combination switch</li> <li>4. Front light ECU</li> <li>5. Driver side J/B control ECU</li> </ol>	<a href="#">DI-1177</a> <a href="#">DI-965</a> <a href="#">IN-35</a> <a href="#">IN-35</a> <a href="#">IN-35</a>

**WIPER AND WASHER SYSTEM:**

Symptom	Suspect Area	See page
Wiper and washer system does not operate.	<ol style="list-style-type: none"> <li>1. Wiper and washer switch circuit</li> <li>2. Wiper motor circuit</li> <li>3. Combination switch</li> <li>4. Passenger side J/B control ECU</li> </ol>	<a href="#">DI-967</a> <a href="#">DI-1079</a> <a href="#">IN-35</a> <a href="#">IN-35</a>

**POWER TILT AND TELESCOPIC STEERING SYSTEM:**

Symptom	Suspect Area	See page
Both tilt and telescopic: Only tilt and telescopic manual switch function does not operate.	1. Tilt and telescopic manual switch circuit 2. Tilt and telescopic steering ECU	<a href="#">DI-979</a> <a href="#">IN-35</a>
Tilt only: Only tilt and telescopic manual switch function does not operate.	1. Tilt and telescopic manual switch circuit 2. Tilt and telescopic steering ECU	<a href="#">DI-979</a> <a href="#">IN-35</a>
Telescopic only: Only tilt and telescopic manual switch function does not operate.	1. Tilt and telescopic manual switch circuit 2. Tilt and telescopic steering ECU	<a href="#">DI-979</a> <a href="#">IN-35</a>