

Wiper and Washer Switch Circuit

CIRCUIT DESCRIPTION

This circuit detects the state of the wiper and washer switch and send it to the Passenger Side J/B ECU.

INSPECTION PROCEDURE

- 1 Check wiper and washer switch using LEXUS hand-held tester.

PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

CHECK:

Check the wiper switch using DATA LIST.

OK:

Wiper switch:

Switch Name (Tester display)	No pressing	Pressing
Front wiper MIST switch (F WIPER MIST SW)	OFF	ON
Front wiper AUTO switch (F WIPER AUTO SW)	OFF	ON
Front wiper HI switch (F WIPER HI SW)	OFF	ON
Front wiper LO switch (F WIPER LO SW)	OFF	ON
Front wiper INT switch (F WIPER INT SW)	OFF	ON

Washer switch:

Switch Name (Tester display)	No pressing	Pressing
Front washer switch (F WASHER SW)	OFF	ON

OK

Proceed to next circuit inspection shown on problem symptom table (See page DI-960).

NG

Replace combination switch (See page BO-131).