



## PRE-CHECK

### USING HAND-HELD TESTER

- (a) Hook up the LEXUS hand-held tester to the DLC3.
- (b) Monitor the ECU data by following the prompts on the tester screen.

#### HINT:

LEXUS Hand-held tester has a "Snapshot" function which records the monitored data.

Please refer to the LEXUS hand-held tester operator's manual for further details.