


## TERMINALS OF ECU

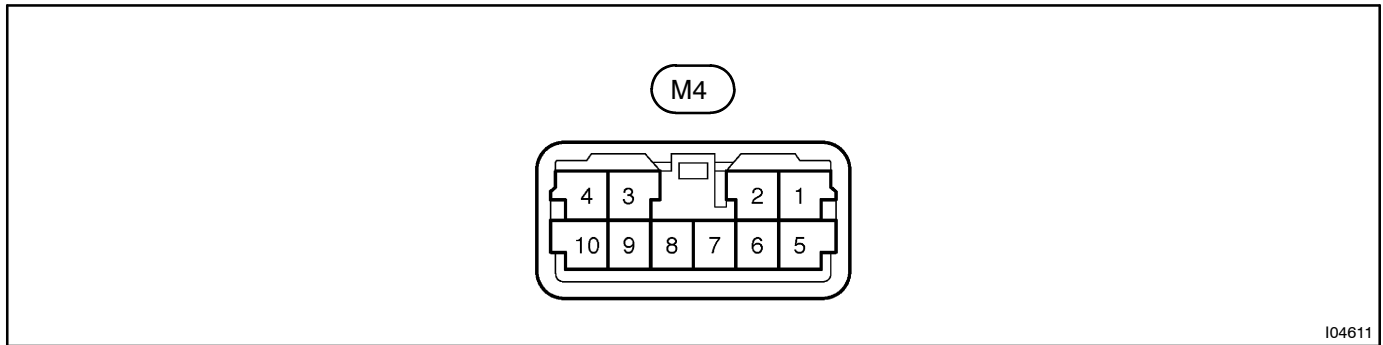

I04611

Symbols (Terminals No.)	Wiring Color	Condition	STD Voltage (V)
DWN ↔ E (M4-3 ↔ M4-7)	R-B ↔ W-B	Sliding roof control switch TILT DOWN	10 - 14 V
		Others	Below 1 V
UP ↔ E (M4-4 ↔ M4-7)	R-Y ↔ W-B	Sliding roof control switch TILT UP	10 - 14 V
		Others	Below 1 V
+B ↔ E (M4-5 ↔ M4-7)	L ↔ W-B	Always	10 - 14 V
E ↔ Body ground (M4-7 ↔ Body ground)	W-B ↔ Body Ground	Always	10 - 14 V
IG ↔ E (M4-8 ↔ M4-7)	LG-R ↔ W-B	Ignition switch ON	10 - 14 V
		Ignition switch OFF or ACC	Below 1 V
OPN ↔ E (M4-9 ↔ M4-7)	G-B ↔ W-B	Sliding roof control switch OPEN	10 - 14 V
		Others	Below 1 V
CLS ↔ E (M4-10 ↔ M4-7)	G-Y ↔ W-B	Sliding roof control switch CLOSE	10 - 14 V
		Others	Below 1 V