

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
Sliding roof control system does not operate.	3. Sliding Roof Gear Assembly with ECU Power Source Circuit	DI-994
	4. Sliding Roof Control Switch Circuit	DI-997
Sliding roof operates abnormally or stops half way.	1. Pulse Plate (Sliding Roof Limit Switch) Circuit	DI-1000
Jam protection system does not operate.	1. Sliding Roof Gear Assembly with ECU Power Source Circuit	DI-994