



PRE-CHECK

1. DTC CHECK (Using LEXUS hand-held tester)

- Prepare the LEXUS hand-held tester.
- Connect the LEXUS hand-held to DLC3.
- Turn the ignition switch ON and the LEXUS hand-held tester main switch ON.
- Use the LEXUS hand-held tester to check the DTCs, note them down. (For opening instructions, see the LEXUS hand-held tester's instruction book).
- See [page DI-1006](#), to confirm the details of the DLC3.

2. DTC CLEARANCE

DTC will be cleared when the trouble output to DTC is recovered normally.