

**DIAGNOSTIC TROUBLE CODE CHART**

If a malfunction code is displayed during the DTC check, check the circuit listed for that code in the table below and proceed to the appropriate page.

DTC No. (See Page)	Detection Item	Trouble Area
B1244 (DI-1015)	Light sensor circuit malfunction	<ul style="list-style-type: none"> <li>• Light sensor</li> <li>• Driver side J/B ECU</li> </ul>
B1268 (DI-1017)	Back-up communication bus malfunction (between Combination Switch ECU and Driver Side J/B ECU)	<ul style="list-style-type: none"> <li>• Wire harness</li> <li>• Combination switch ECU</li> <li>• Driver side J/B ECU</li> </ul>