


Headlight Cleaner Switch Circuit

CIRCUIT DESCRIPTION

This circuit detects the conditions of the headlight cleaner switch.

WIRING DIAGRAM

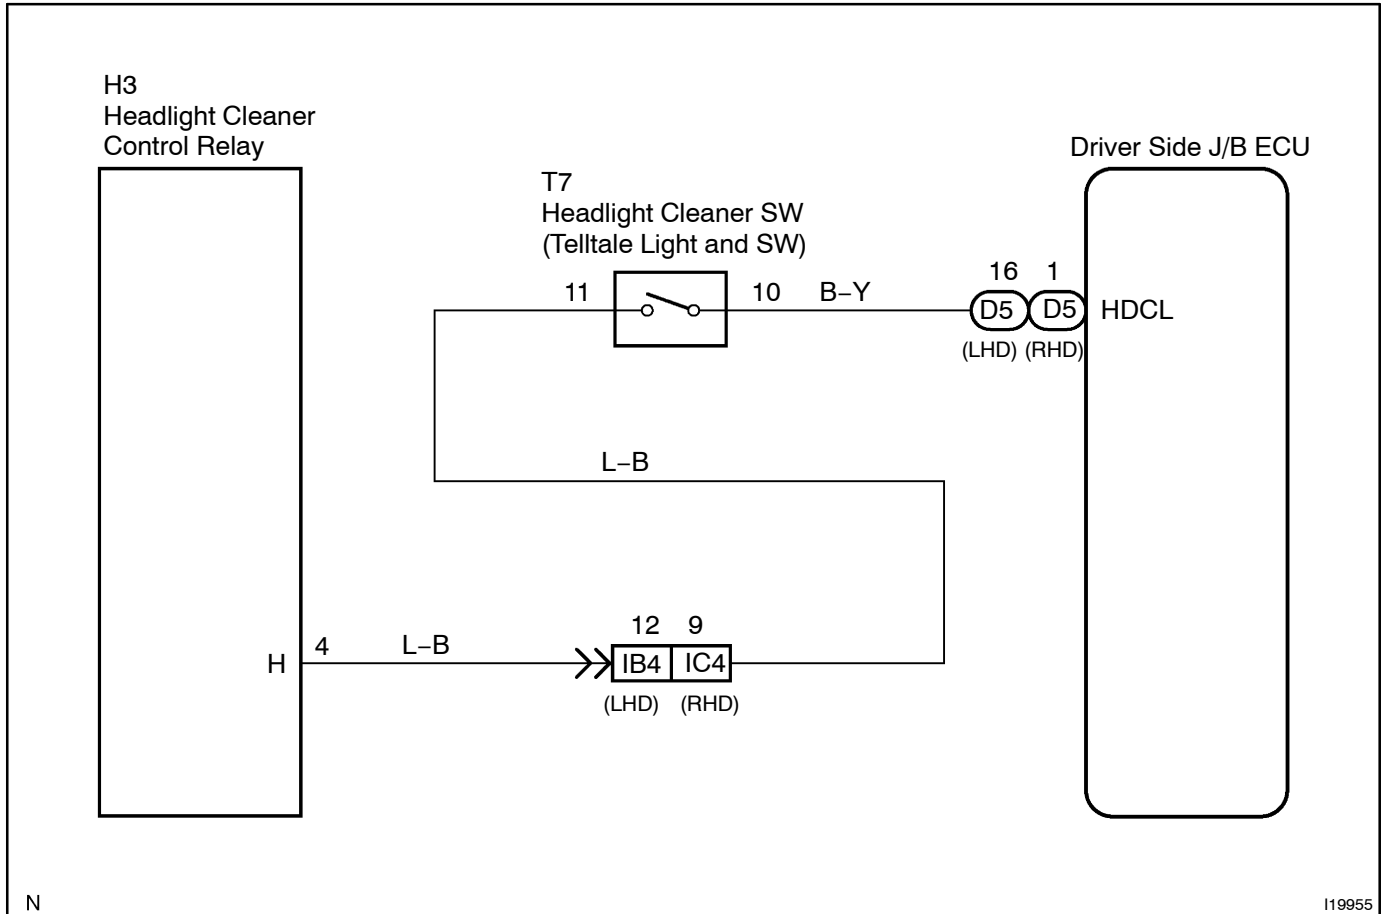

N

I19955

INSPECTION PROCEDURE

1 Check the headlight cleaner switch (See page BE-60).

NG

Replace the headlight cleaner switch.

OK

2 Check wire harness and connector between headlight cleaner switch and driver side J/B ECU (See page N-35).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem/symptom table (See page DI-1012).