

PROBLEM SYMPTOMS TABLE

INTERIOR LIGHT SYSTEM:

Symptom	Suspect Area	See page
All interior light does not light up.	<ol style="list-style-type: none"> 1. Power source circuit 2. Illumination light circuit 3. Passenger side J/B control ECU 	DI-1073 DI-1099 IN-35
Buckle illumination light does not light up.	<ol style="list-style-type: none"> 1. Passenger buckle illumination circuit 2. Passenger side J/B control ECU 	DI-1095 IN-35
Outer step light does not light up. (in Outer mirror)	<ol style="list-style-type: none"> 1. Illumination circuit 2. Passenger side J/B control ECU 	DI-1099 IN-35

POWER SHOULDER BELT ANCHORAGE SYSTEM:

Symptom	Suspect Area	See page
Passenger belt anchor can not be operated manually.	<ol style="list-style-type: none"> 1. Shoulder belt anchor motor circuit 2. Passenger side J/B control ECU 3. Driver door control ECU 	DI-1097 IN-35 IN-35

WIPER AND WASHER SYSTEM:

Symptom	Suspect Area	See page
Wiper and washer system does not operate. (All)	<ol style="list-style-type: none"> 1. Power source circuit 2. Wiper motor circuit 3. Variable motor circuit 4. Passenger side J/B control ECU 	DI-1073 DI-1079 DI-1083 IN-35
Wiper system does not operate. (HI speed)	<ol style="list-style-type: none"> 1. Wiper HI switch circuit 2. Passenger side J/B control ECU 	DI-1081 IN-35
Washer fluid does not operate	Washer hose and nozzle	BE-64
When wiper switch is at HI position, the wiper blade is in contact with the body. When the wiper switch is OFF, the wiper blade does not retract or the retract position wrong.	<ol style="list-style-type: none"> 1. Wiper HI switch circuit 2. Wiper motor circuit 3. Passenger side J/B control ECU 	DI-1081 DI-1079 IN-35
Washer system does not operate	<ol style="list-style-type: none"> 1. Washer motor circuit 2. Passenger side J/B control ECU 	DI-1107 IN-35
Washer fluid level warning system does not operate.	<ol style="list-style-type: none"> 1. Washer fluid level warning switch circuit 2. Passenger side J/B control ECU 	DI-1103 IN-35

OTHERS:

Symptom	Suspect Area	See page
Navigation system is abnormal.	<ol style="list-style-type: none"> 1. Navigation ECU communication circuit 2. Navigation ECU 3. Multi display ECU 4. Passenger side J/B control ECU 	DI-1093 IN-35 IN-35 IN-35
Shift point too high or too low.	<ol style="list-style-type: none"> 1. Pattern select switch circuit 2. Shift lock ECU 	DI-1077 IN-35
Rear sunshade is abnormal.	<ol style="list-style-type: none"> 1. Rear sunshade ECU circuit 2. Passenger side J/B control ECU 	DI-1091 IN-35
Brake pad indicator does not light up. (LHD Models)	<ol style="list-style-type: none"> 1. Combination meter system 2. Brake pad sensor circuit 3. ABS system 4. Skid control ECU 5. Problem symptom table on theft deterrent system 	DI-900 DI-1102 DI-339 IN-35 IN-35
Rear seat control system does not operate.	<ol style="list-style-type: none"> 1. Rear seat return switch circuit 2. Rear right or left seat control ECU 3. Passenger side J/B control ECU 	DI-1087 IN-35 IN-35

HINT:

When the Passenger Side J/B Control ECU-related devices are to be checked, select the "BODY NO. 3" from the MENU of the LEXUS hand-held tester.