


Wiper Switch (Hi-speed) Circuit

CIRCUIT DESCRIPTION

Passenger side J/B ECU receives the HI position signal of the wiper switch to operate the wiper motor at HI speed.

WIRING DIAGRAM

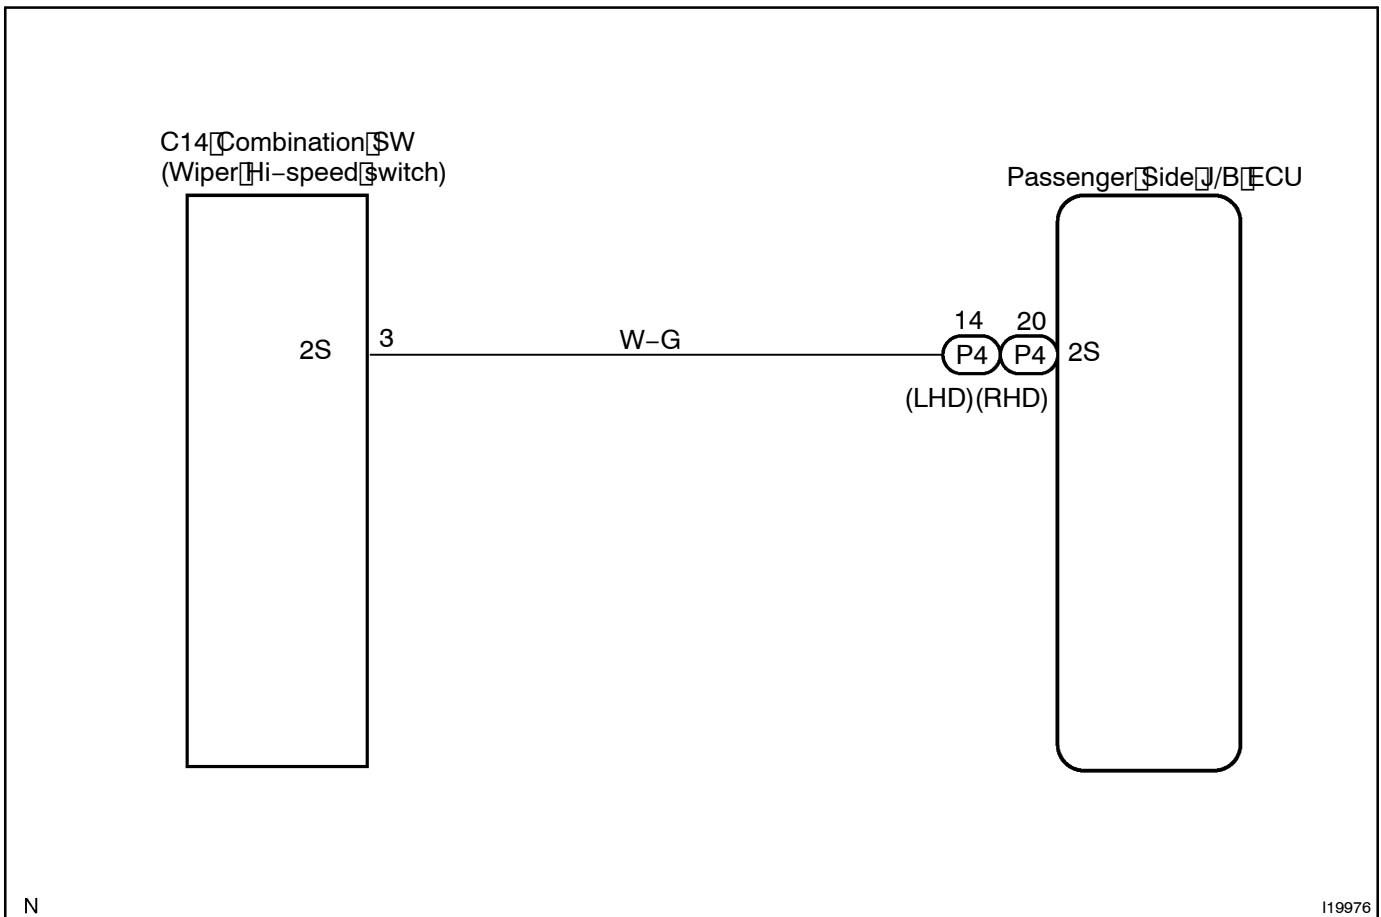

INSPECTION PROCEDURE

- 1 Check the wiper and washer switch using LEXUS hand-held tester.

PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

CHECK:

Check the wiper and washer switch (HI position signal) using DATA TEST.

OK

Proceed to next circuit inspection shown on problem symptom table (See page DI-1071).

NG

2 Check the wiper and washer switch (See page BE-64).

NG

Replace the wiper and washer switch.

OK

3 Check wire harness and connector between wiper and washer switch and passenger side J/B ECU (See page IN-35).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem/symptom table (See page DI-1071).