


## Shoulder Belt Anchor Motor Circuit

### CIRCUIT DESCRIPTION

Passenger side J/B ECU receives the shoulder belt anchor switch signal form the Passenger Door ECU to operate the shoulder belt anchor motor.

### WIRING DIAGRAM

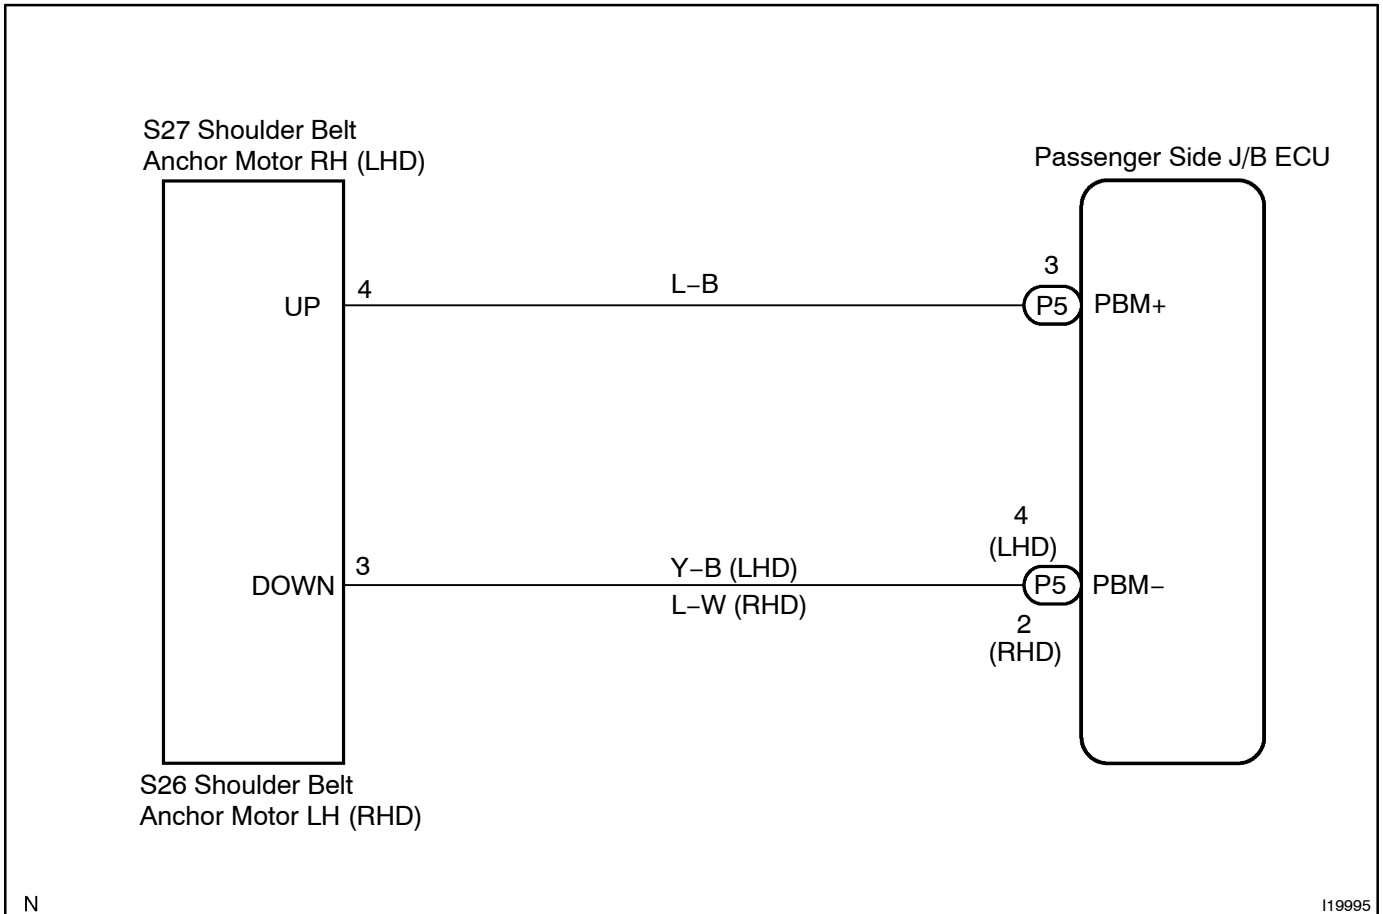

N

I19995

**INSPECTION PROCEDURE****HINT:**

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

**1** Check the shoulder belt anchor motor using LEXUS hand-held tester.

**PREPARATION:**

Connect the LEXUS hand-held tester to the DLC3.

**CHECK:**

Check the shoulder belt anchor motor can operate in an ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptom table (See page DI-1071).

NG

**2** Check the shoulder belt anchor motor (See page BE-95).

NG

Replace the shoulder belt anchor motor.

OK

**3** Check wire harness and connector between shoulder belt anchor motor and passenger side J/B ECU (See page IN-35).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptom table (See page DI-1071).