

## DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during the DTC check, check the circuit listed for that code in the table below and proceed to the appropriate page.

DTC No. (See Page)	Circuit Inspection	Trouble Area
B1268 (DI-1114)	Back-up communication bus malfunction (between Driver Side J/B ECU and Luggage Room J/B ECU)	<ul style="list-style-type: none"> <li>• Wire harness</li> <li>• Luggage room J/B ECU</li> </ul>
B2402 (DI-1117)	Transistor relay overload malfunction	<ul style="list-style-type: none"> <li>• Luggage room J/B ECU</li> <li>• Wire harness</li> </ul>
B2403 (DI-1117)	Transistor relay overheat malfunction	<ul style="list-style-type: none"> <li>• Luggage room J/B ECU</li> <li>• Wire harness</li> </ul>