

PROBLEM SYMPTOMS TABLE

Symptom	Suspect Area	See page
*Luggage room J/B control system does not operate. (All)	1. Power source circuit 2. Ignition switch power source circuit 3. Luggage room J/B ECU	DI-1119 DI-1122 IN-35
Rear A/C system does not operate.	1. Rear A/C amplifier circuit 2. A/C ECU 3. Luggage room J/B ECU	DI-1122 IN-35 IN-35
Fuel lid opener system does not operate.	1. Fuel lid opener motor circuit 2. Luggage room J/B ECU	DI-1124 IN-35
Luggage compartment door opener or closer system does not operate.	1. Luggage compartment door opener switch circuit 2. Luggage compartment door courtesy switch circuit 3. Luggage compartment door (LOPN, LCLS) switch circuit 4. Luggage compartment door key lock and unlock switch circuit 5. Door Lock switch (Luggage) circuit 6. Luggage compartment door motor circuit 7. Luggage room J/B ECU	DI-1133 DI-1130 DI-1132 DI-1126 DI-1135 DI-1137 IN-35
Fuel sender gauge does not operate.	1. Fuel sender main gauge circuit 2. Fuel sender sub gauge circuit 3. Luggage room J/B ECU	DI-1139 DI-1139 IN-35
Luggage compartment light does not light up.	1. Luggage compartment light circuit 2. Luggage compartment door courtesy switch circuit 3. Luggage room J/B ECU	DI-1137 DI-1130 IN-35
Rear seat belt buckle illumination light does not light up.	1. Rear seat belt buckle illumination light circuit 2. Luggage room J/B ECU	DI-1139 IN-35

*: Luggage room J/B ECU systems:

Rear A/C system, Fuel lid opener system, Luggage compartment door opener system, Luggage compartment door closer system, Fuel sender gauge, Taillight, Stop light, Hi-mounted stop light, Back-up light, Rear fog light, License plate light, Luggage compartment light, Rear seat belt buckle illumination light and Smart key system.