

# Luggage Compartment Door Opener Motor Circuit


## CIRCUIT DESCRIPTION

The open-close operation of the luggage door is checked, and the signals are sent to the Luggage Room J/B ECU.

The luggage close motor is built in the luggage door lock assembly.

See the luggage close switch circuit.

## WIRING DIAGRAM

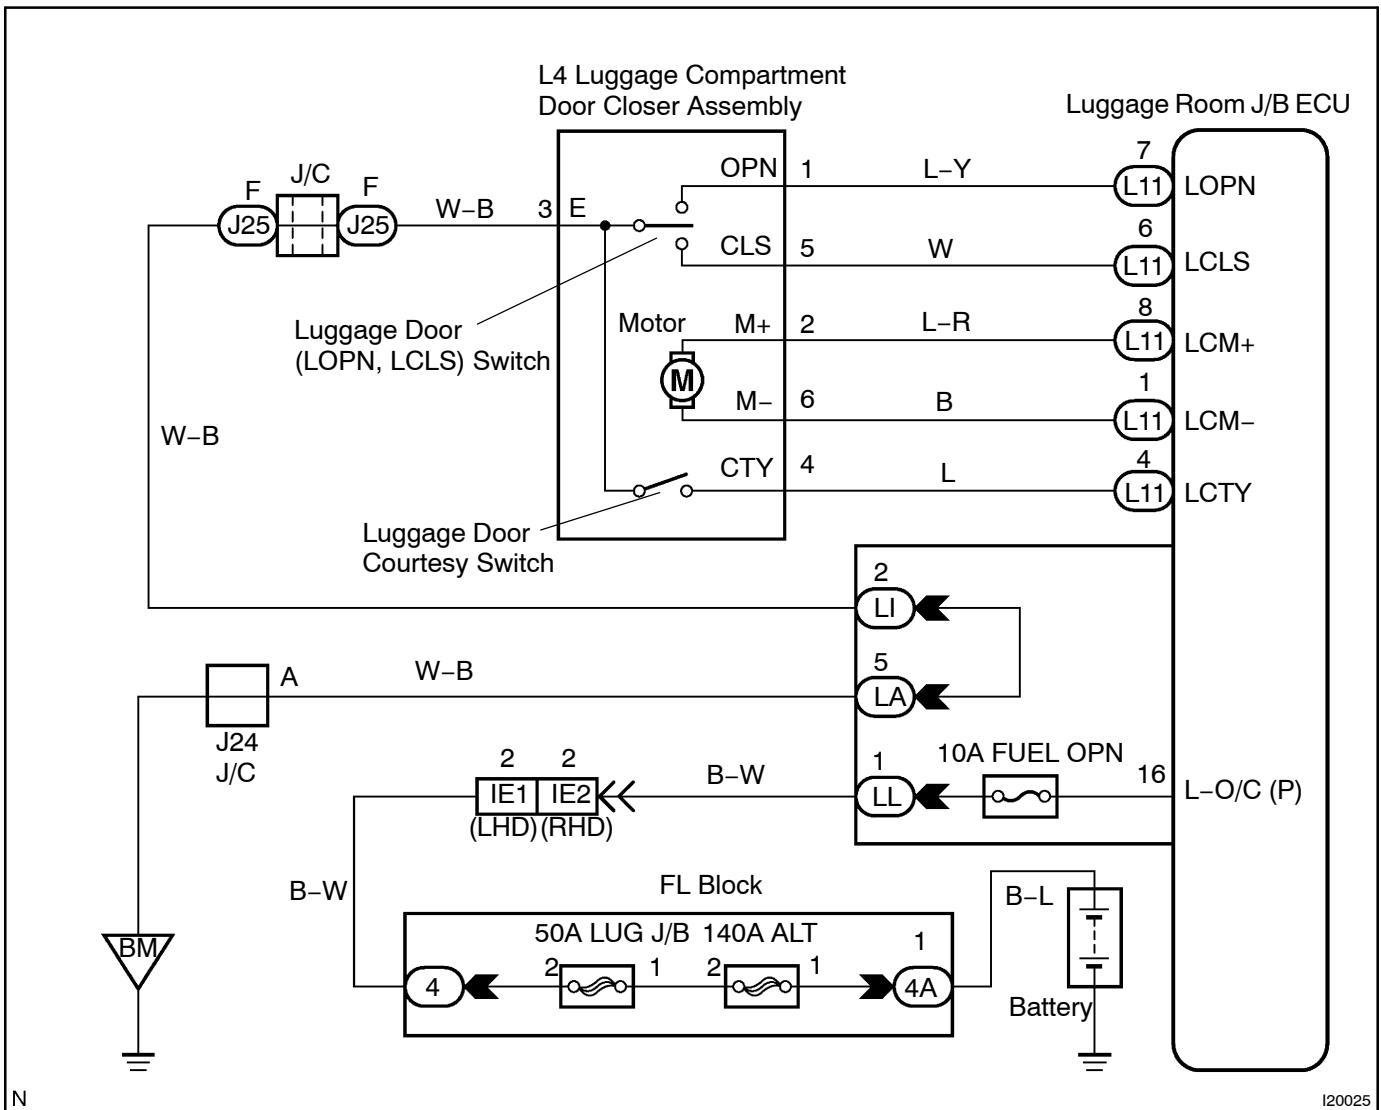

**INSPECTION PROCEDURE**

1 Check luggage compartment door opener motor using LEXUS hand-held tester.

**PREPARATION:**

Connect the LEXUS hand-held tester to the DLC3.

**CHECK:**

Check the luggage compartment door opener motor using ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptom table (See page DI-1119).

NG

2 Check FUEL OPN fuse.

NG

Replace fuse

OK

3 Check luggage compartment door opener motor (See page BE-174).

NG

Replace luggage compartment door opener motor.

OK

4 Check wireharness and connector between luggage compartment door opener motor and luggage room J/B ECU (See page IN-35).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1119).