

DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during DTC check, find the circuit corresponding to the code in the table below and proceed to the appropriate page.

DTC No. (See Page)	Circuit Inspection	Trouble Area
B1221 (DI-1200)	Power Window Switch Circuit on Driver Door	<ul style="list-style-type: none"> • Power window switch • Wire harness • Driver door control ECU
B1222 (DI-1200)	Door Lock Switch Circuit on Driver Door	<ul style="list-style-type: none"> • Door lock switch • Door key lock and unlock switch • Wire harness • Driver door control ECU
B1231 (DI-1201)	Jam Protection Limit Switch Circuit on Driver Door	<ul style="list-style-type: none"> • Jam protection limit switch • Wire harness • Driver door control ECU
B1232 (DI-1204)	Jam Protection Pulse Switch Circuit on Driver Door	<ul style="list-style-type: none"> • Jam protection pulse switch • Wire harness • Driver door control ECU
B2211 (DI-1206)	Door Closer and Double Locking Motor Malfunction on Driver Door	<ul style="list-style-type: none"> • Door closer motor and double locking motor • Wire harness • Driver door control ECU