

CIRCUIT INSPECTION

DTC	B1221	Power window switch circuit on driver door
------------	--------------	---

DTC	B1222	Door lock switch circuit on driver door
------------	--------------	--

CIRCUIT DESCRIPTION

These DTC notify how switch works as follows:

If DTC is not output when operating switch, it means failure of switch contact. If DTC is output when not operating switch, it means stick of switch. When something wrong is found by this diagnosis, inspect each switch. Then, replace the switch if there is a problem, or check the wireharness if there is no problem.

DTC No.	DTC Detecting Condition	Trouble Area
B1221	Stick of either of the power window master switch (except window lock switch)	<ul style="list-style-type: none"> • Power window master switch • Wireharness
B1222	Stick of door key lock and unlock switch	<ul style="list-style-type: none"> • Door lock control switch • Door key lock and unlock switch • Wireharness

HINT:

Please refer to BE section for switch inspection.