


## Double locking switch circuit

### CIRCUIT DESCRIPTION

The double lock switch is built in the door lock assembly.

This switch is used to detect the set/unset conditions of the double lock.

WIRING DIAGRAM

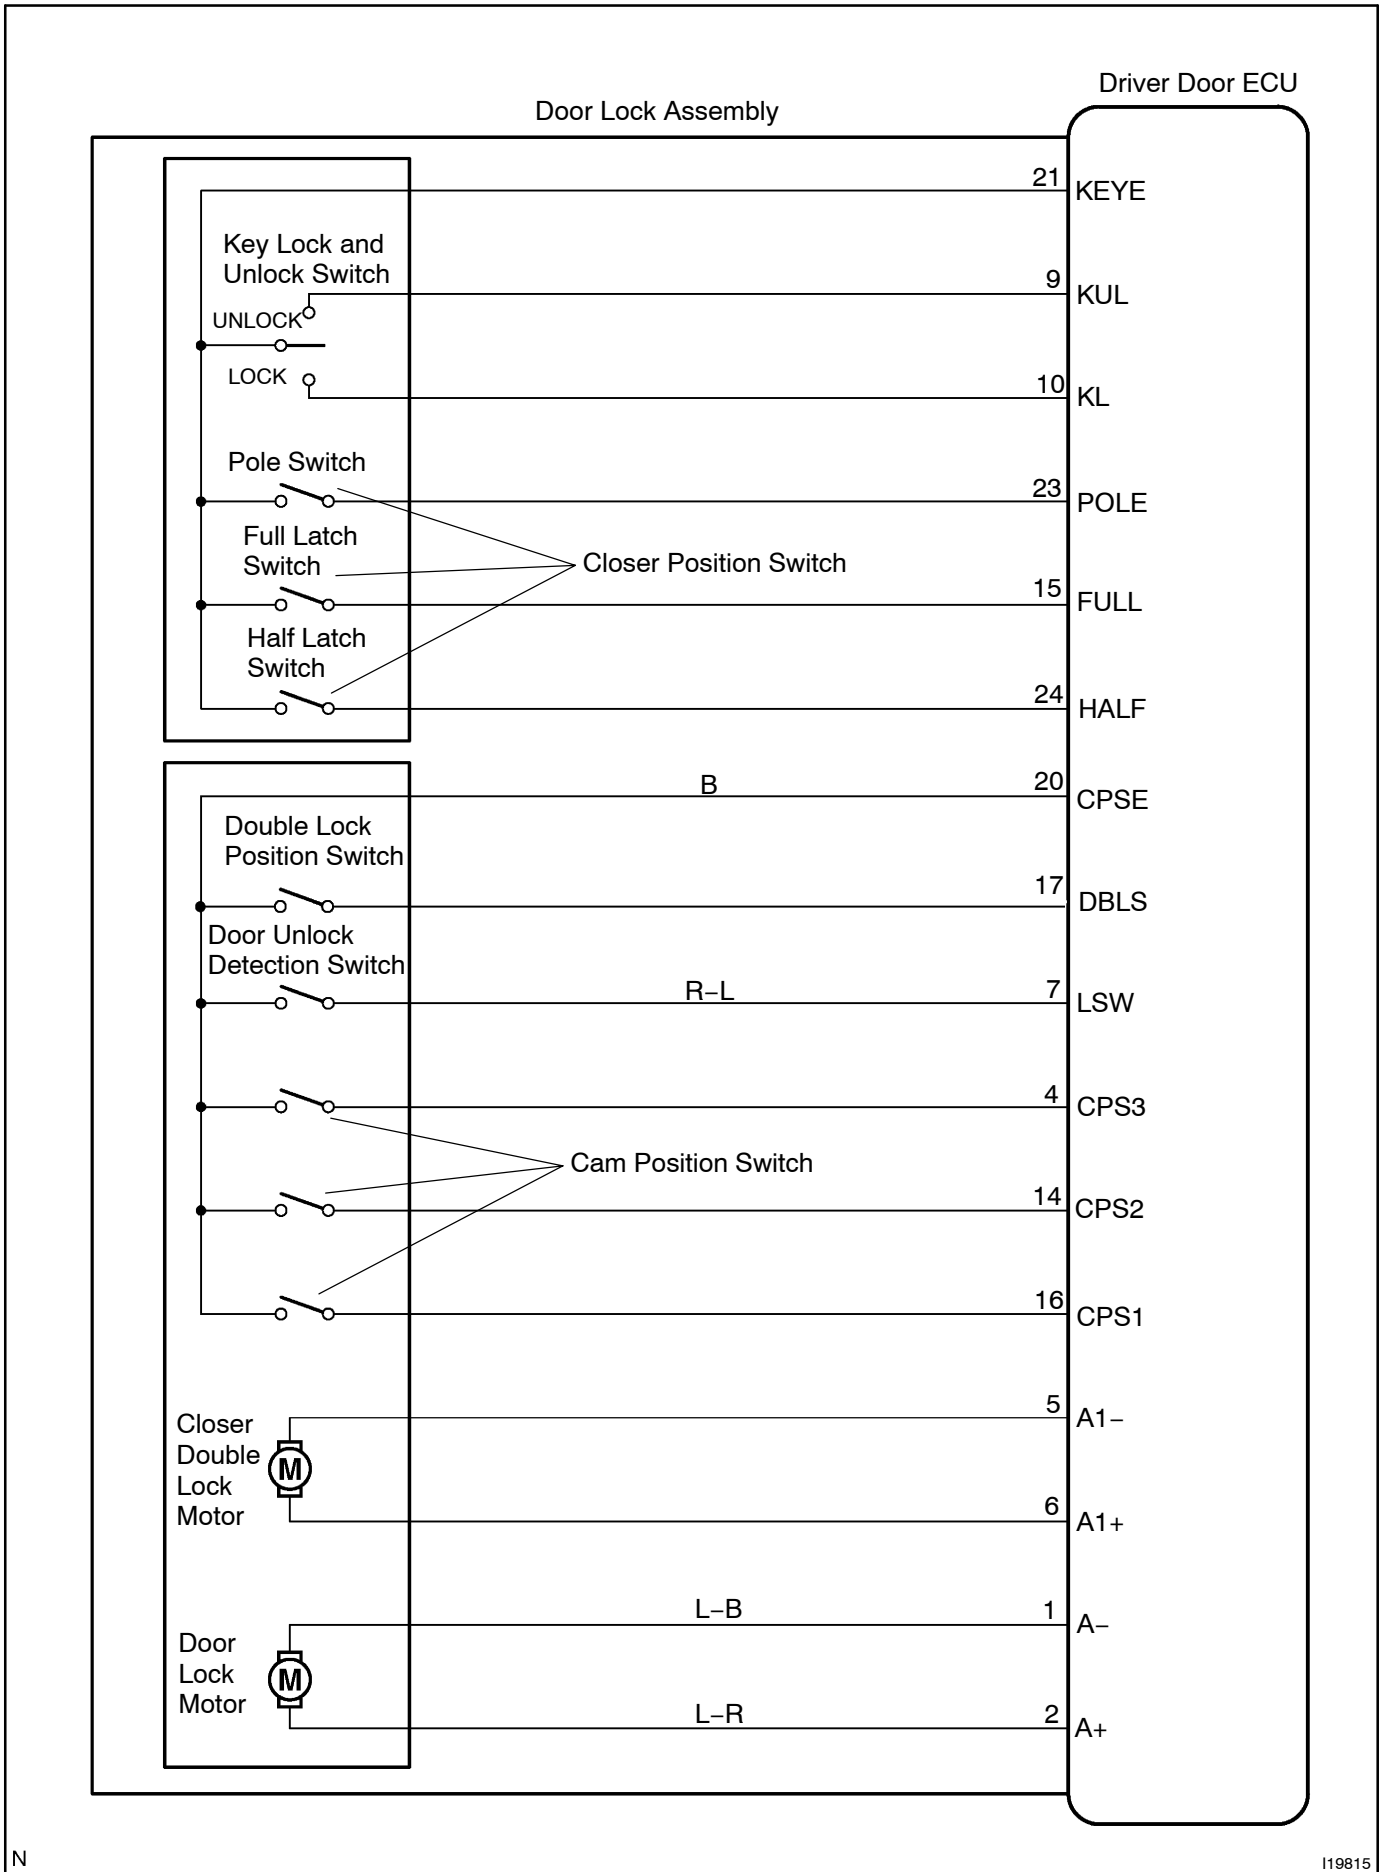

## INSPECTION PROCEDURE

### HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1 Check double locking switch using LEXUS hand-held tester.

### PREPARATION:

Connect the LEXUS hand-held tester to DLC3.

### CHECK:

Check the double locking switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1197).

NG

2 Check double locking switch (See page BE-102).

NG

Replace door lock assembly.

OK

3 Check wire harness and connector between double locking switch and driver door ECU (See page N-35).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1197).