


Trigger switch circuit

CIRCUIT DESCRIPTION

The smart trigger switch is built in the outside handle.

The driver door ECU detects the condition of the smart trigger switch.

WIRING DIAGRAM

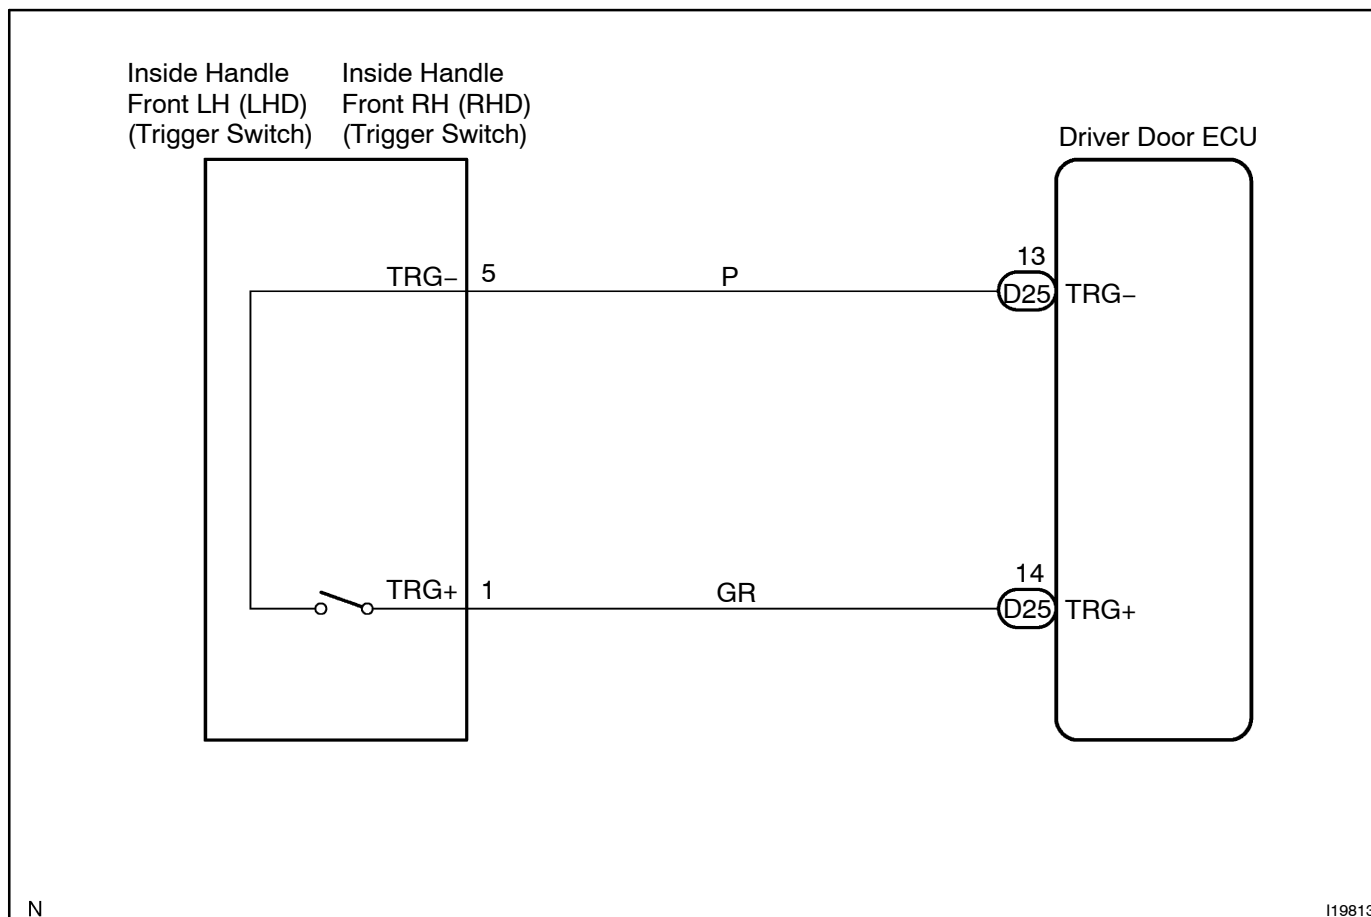

INSPECTION PROCEDURE**HINT:**

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1 Check trigger switch using LEXUS hand-held tester.

PREPARATION:

Connect the LEXUS hand-held tester to DLC3.

CHECK:

Check the trigger switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1197).

NG

2 Check wire harness and connector between trigger switch and driver door ECU (See page IN-35).

NG

Repair or replace wire harness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1197).