



## PRE-CHECK

### 1. DTC CHECK (Using LEXUS hand-held tester)

- (a) Prepare the LEXUS hand-held tester.
- (b) Connect the tester to DLC3.
- (c) Turn the ignition switch ON and the LEXUS hand-held tester main switch ON.
- (d) Use the LEXUS hand-held tester to check the DTCs, and note them down. (For operational instructions, see the LEXUS hand-held tester's instruction book).
- (e) See page DI-1266, to confirm the details of DLC3.

### 2. DTC CLEARANCE

DTC will be cleared when the defective condition is recovered normally.