

DIAGNOSTIC TROUBLE CODE CHART

If a malfunction code is displayed during DTC check, find the circuit corresponding to the code in the table below and proceed to the appropriate page.

DTC No. (See Page)	Circuit Inspection	Trouble Area
B1223 (DI-1273)	Power Window Switch Circuit on Passenger Door	<ul style="list-style-type: none"> • Power window switch • Manual door lock switch • Wire harness • Passenger door lock switch
B1224 (DI-1274)	Door Lock Switch Circuit on Passenger Door	<ul style="list-style-type: none"> • Door lock switch • Wire harness • Front passenger door ECU
B1233 (DI-1274)	Jam Protection Limit Switch Circuit on Passenger Door	<ul style="list-style-type: none"> • Jam protection limit switch • Wire harness • Front passenger door ECU
B1234 (DI-1277)	Jam Protection Pulse Switch Circuit on Passenger Door	<ul style="list-style-type: none"> • Jam protection pulse switch • Wire harness • Front passenger door ECU
B2212 (DI-1279)	Door Closer and Double Locking Motor Malfunction on Passenger Door	<ul style="list-style-type: none"> • Door closer motor • Double locking motor • Wire harness • Front passenger door ECU