

PROBLEM SYMPTOMS TABLE**POWER WINDOW CONTROL SYSTEM:**

Symptom	Suspect Area	See page
Passenger side power window does not operate.	1. Power window motor circuit 2. Passenger door control ECU	DI-1288 IN-35
Jam protection function and auto up or down function does not operate.	1. Jam protection limit switch circuit 2. Jam protection pulse switch circuit 3. Passenger door control ECU 4. Theft deterrent ECU	DI-1274 DI-1277 IN-35 IN-35

POWER DOOR LOCK CONTROL SYSTEM:

Symptom	Suspect Area	See page
Passenger side door lock does not operate.	1. Door lock motor circuit 2. Passenger door control ECU 3. Theft deterrent ECU	DI-1290 IN-35 IN-35
Door key related function does not operate.	1. Door unlock detection switch circuit 2. Door courtesy light and courtesy switch circuit 3. Passenger door control ECU 4. Theft deterrent ECU	DI-1293 DI-1296 IN-35 IN-35
Key confinement prevention function does not operate.	1. Door courtesy light and courtesy switch circuit 2. Door unlock detection switch circuit 3. Passenger door control ECU 4. Theft deterrent ECU	DI-1296 DI-1293 IN-35 IN-35

DOOR CLOSER SYSTEM:

Symptom	Suspect Area	See page
Passenger side door closer does not operate.	1. Power source circuit 2. Door closer motor circuit 3. Door closer position switch circuit 4. Cam position switch circuit 5. Passenger door control ECU	DI-1282 DI-1299 DI-1305 DI-1279 IN-35

DOUBLE LOCKING SYSTEM:

Symptom	Suspect Area	See page
Passenger side double locking does not operate.	1. Power source circuit 2. Double locking motor circuit 3. Double locking switch circuit 4. Passenger door control ECU 5. Theft deterrent ECU	DI-1282 DI-1299 DI-1302 IN-35 IN-35

ILLUMINATION LIGHT SYSTEM:

Symptom	Suspect Area	See page
Door courtesy light does not light up.	1. Door courtesy light and courtesy switch circuit 2. Passenger door control ECU	DI-1296 IN-35
Outer foot light does not light up (in outer mirror).	1. Outer foot light circuit 2. Passenger door control ECU	DI-1317 IN-35
Inside handle illumination does not light up.	1. Inside handle illumination circuit 2. Passenger door control ECU	DI-1328 IN-35

POWER MIRROR CONTROL SYSTEM:

Symptom	Suspect Area	See page
Both right and left mirrors do not operate.	1. Mirror switch circuit 2. Passenger door control ECU	DI-1315 IN-35
Only one side of mirror does not operate.	1. Mirror motor circuit 2. Mirror position sensor circuit (w/ memory) 3. Passenger door control ECU	DI-1309 DI-1315 IN-35
Retract mirror does not operate.	1. Retract mirror switch 2. Retract motor circuit 3. Passenger door control ECU	DI-1326 DI-1311 IN-35
Driving position memory does not operate.	1. Mirror position sensor circuit 2. Passenger door control ECU	DI-1315 IN-35

MIRROR DEFOGGER SYSTEM:

Symptom	Suspect Area	See page
Mirror defogger system does not operate.	1. Mirror defogger circuit 2. Passenger door control ECU	DI-1313 IN-35

AUTOMATIC GLARE-RESISTANT ELECTRO CHROMIC MIRROR SYSTEM:

Symptom	Suspect Area	See page
Automatic glare-resistant electro chromic mirror system does not operate.	1. Electro chromic mirror circuit 2. Passenger door control ECU	DI-1319 IN-35

POWER SHOULDER BELT ANCHORAGE SYSTEM:

Symptom	Suspect Area	See page
Power shoulder belt anchorage system does not operate.	1. Shoulder belt adjust switch circuit 2. Passenger door control ECU	DI-1326 IN-35

OTHERS:

Symptom	Suspect Area	See page
Light auto turn off system does not sound a buzzer.	1. Door courtesy light and courtesy switch circuit 2. Driver side J/B control ECU 3. Passenger door control ECU	DI-1396 IN-35 IN-35
Key remainder system does not sound a buzzer.	1. Door courtesy light and courtesy switch circuit 2. Combination meter ECU 3. Passenger door control ECU	DI-1396 IN-35 IN-35