

CIRCUIT INSPECTION

DTC	B1223	Power window switch circuit on passenger door
------------	--------------	--

DTC	B1224	Door lock switch circuit on passenger door
------------	--------------	---

CIRCUIT DESCRIPTION

If DTC is not output when operating switch, it means failure of switch contact. If DTC is output when not operating switch, it means stick of switch. When something wrong is found by this diagnosis, inspect each switch. Then, replace the switch if there is a problem, or check the wireharness if there is no problem.

DTC No.	DTC Detecting Condition	Trouble Area
B1223	Stick of power window switch or door lock control	<ul style="list-style-type: none"> • Power window switch • Wire harness
B1224	Stick of door lock switch	<ul style="list-style-type: none"> • Door lock control switch • Wire harness

HINT:

Please refer to BE section for switch inspection.