


## Trigger switch circuit

### CIRCUIT DESCRIPTION

The smart trigger switch is built in the outside handle.

The passenger door ECU is detects the condition of the smart trigger switch.

### WIRING DIAGRAM

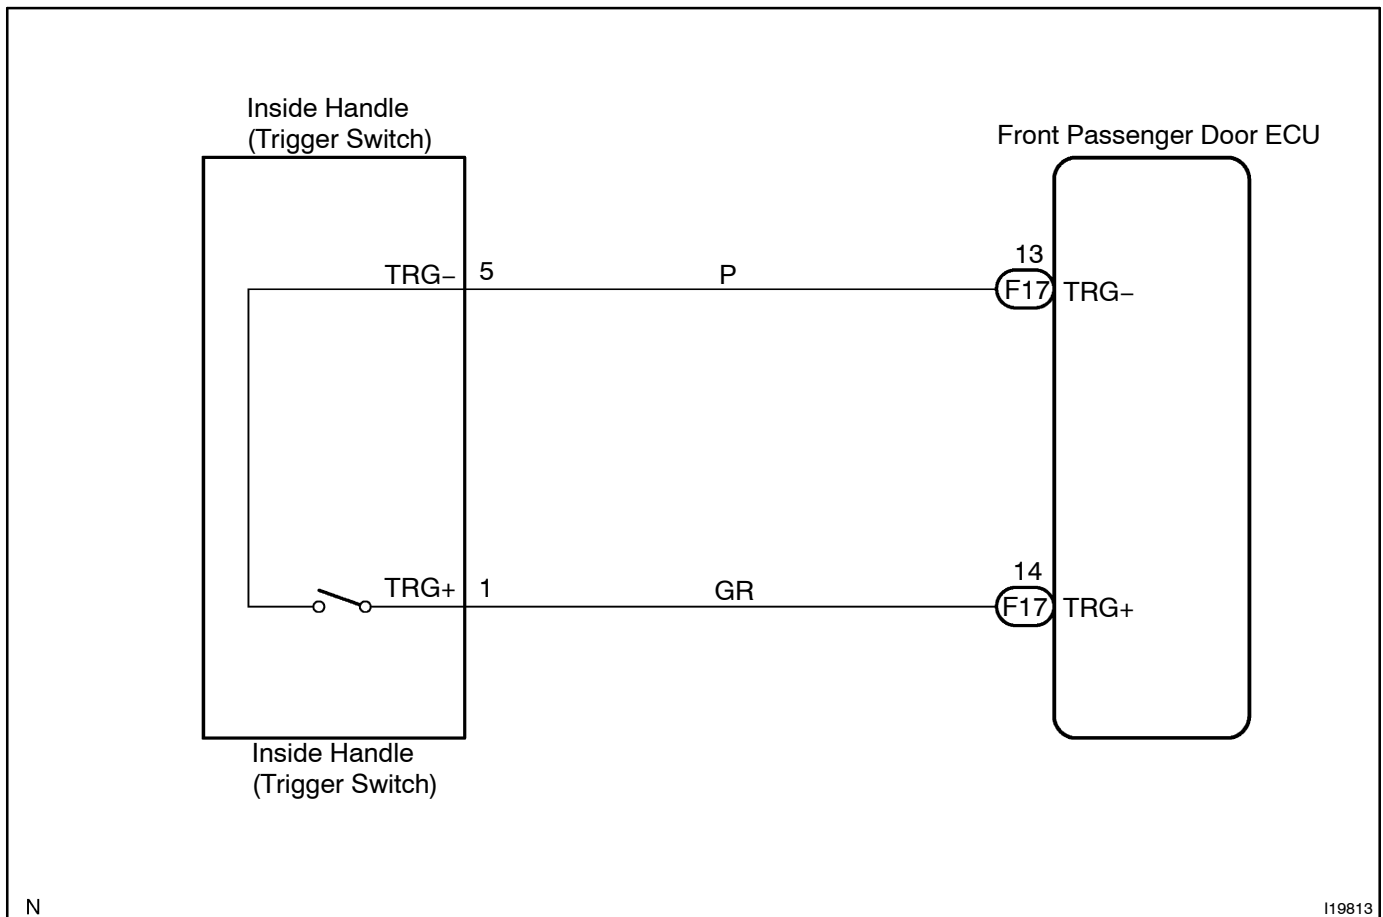

## INSPECTION PROCEDURE

### HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1 Check trigger switch using LEXUS hand-held tester.

### PREPARATION:

Connect the LEXUS hand-held tester to DLC3.

### CHECK:

Check the trigger switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1271).

NG

2 Check wireharness and connector between trigger switch and front passenger door ECU (See page N-35).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1271).