

REAR LEFT DOOR CONTROL SYSTEM

HOW TO PROCEED WITH TROUBLESHOOTING

DISVQ-01

HINT:

The ECU is connected to the multiplex communication system. Therefore, be sure to check that there is no troubles in the the multiplex communication system before performing the troubleshooting.

