

PROBLEM SYMPTOMS TABLE**POWER WINDOW CONTROL SYSTEM:**

Symptom	Suspect Area	See page
Rear right side power window does not operate.	1. Power window motor circuit 2. Rear left door control ECU	DI-1354 IN-35
Jam protection function and auto up or down function does not operate.	1. Jam protection limit switch circuit 2. Jam protection pulse switch circuit 3. Rear left door control ECU 4. Theft deterrent ECU	DI-1349 DI-1344 IN-35 IN-35

POWER DOOR LOCK CONTROL SYSTEM:

Symptom	Suspect Area	See page
Rear right side door lock does not operate.	1. Power source circuit 2. Door lock motor circuit 3. Rear left door control ECU 4. Theft deterrent ECU	DI-1349 DI-1356 IN-35 IN-35
Key confinement prevention function does not operate.	1. Door courtesy switch circuit 2. Door unlock detection switch circuit 3. Rear left door control ECU 4. Theft deterrent ECU	DI-1362 DI-1359 IN-35 IN-35

DOOR CLOSER SYSTEM:

Symptom	Suspect Area	See page
Rear right side door closer does not operate.	1. Power source circuit 2. Door closer motor circuit 3. Door closer position switch circuit 4. Cam position switch circuit 5. Rear left door control ECU	DI-1349 DI-1346 DI-1368 DI-1346 IN-35

DOUBLE LOCKING SYSTEM:

Symptom	Suspect Area	See page
Rear right side double locking does not operate.	1. Power source circuit 2. Double locking motor circuit 3. Double locking switch circuit 4. Rear left door control ECU	DI-1349 DI-1346 DI-1372 IN-35

ILLUMINATION LIGHT SYSTEM:

Symptom	Suspect Area	See page
Door courtesy light does not light up.	1. Door courtesy light circuit 2. Door courtesy switch circuit 3. Rear left door control ECU	DI-1362 DI-1362 IN-35
Ashtray light does not light up.	1. Ashtray light circuit 2. Rear left door control ECU	DI-1382 IN-35
Inside handle illumination does not light up.	1. Inside handle illumination light circuit 2. Rear left door control ECU	DI-1384 IN-35

OTHERS:

Symptom	Suspect Area	See page
Light auto turn off system does not make buzzer sound.	1. Door courtesy switch circuit 2. Driver side J/B control ECU 3. Rear left door control ECU	DI-1362 IN-35 IN-35
Key remainder system does not make buzzer sound.	1. Door courtesy switch circuit 2. Combination meter ECU 3. Rear left door control ECU	DI-1362 IN-35 IN-35