

CIRCUIT INSPECTION

DTC	B1226	Power Window Switch Circuit on Rear Left Door
------------	--------------	--

CIRCUIT DESCRIPTION

These DTC notify how switch works as follows:

If DTC is not output when operating switch, it means failure of switch contact. If DTC is output when not operating switch, it means stick of switch. When something wrong is found by this diagnosis, inspect each switch. Then, replace the switch if there is a problem, or check the wireharness if there is no problem.

DTC No.	DTC Detecting Condition	Trouble Area
B1226	Stick of power window switch	<ul style="list-style-type: none"> • Power window switch • Wireharness

HINT:

Please refer to BE section for switch inspection.