


## Double locking switch circuit

### CIRCUIT DESCRIPTION

The double locking switch is built in the door lock assembly.  
This switch detects the set/unset conditions of the double lock.

WIRING DIAGRAM

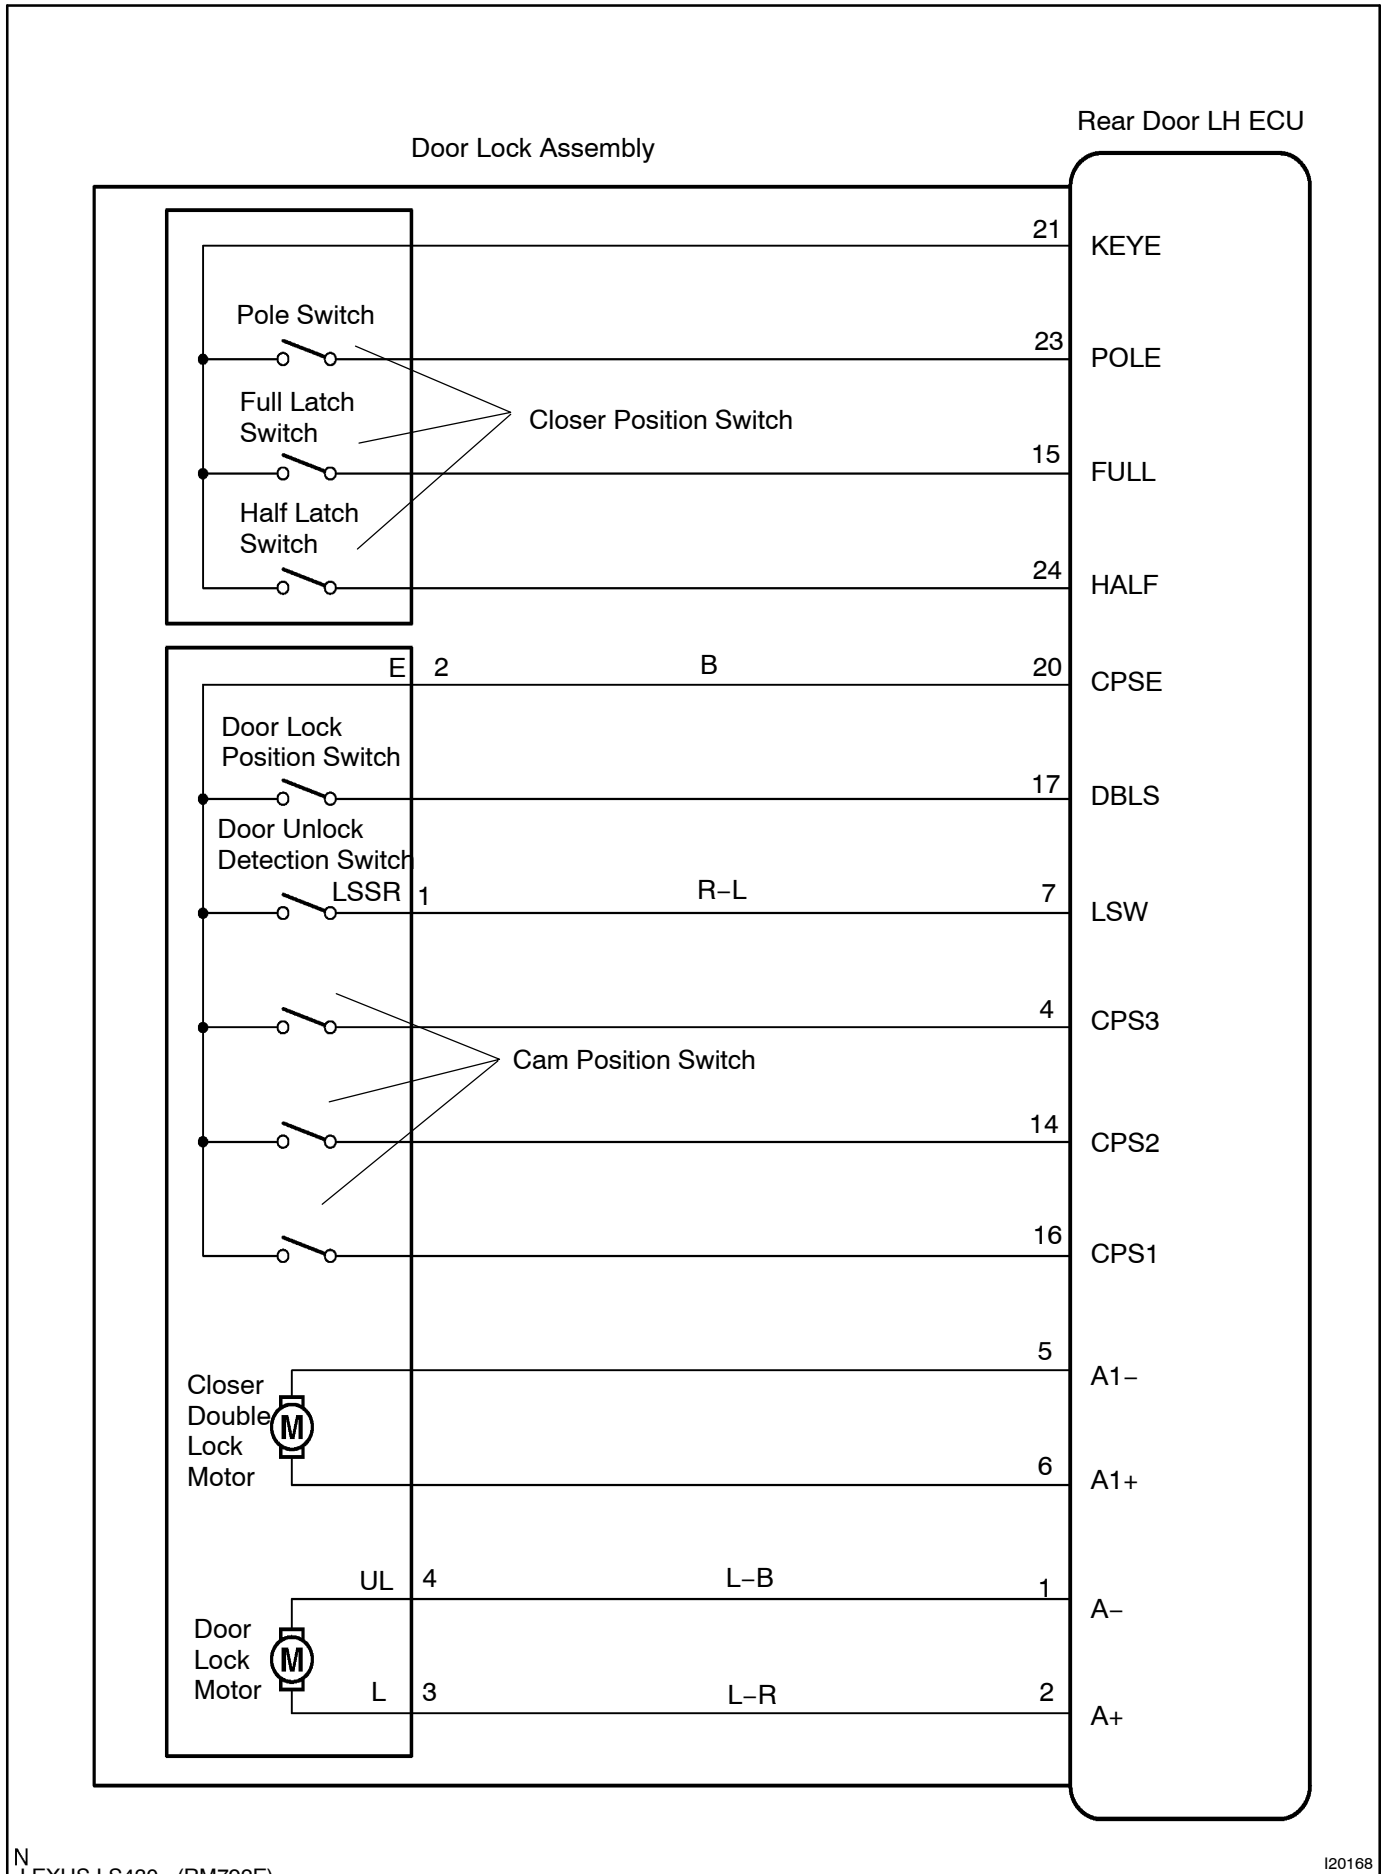

**INSPECTION PROCEDURE****HINT:**

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

**1** Check double locking switch using LEXUS hand-held tester.

**PREPARATION:**

Connect the LEXUS hand-held tester to DLC3.

**CHECK:**

Check the double locking switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1395).

NG

**2** Check double locking switch (See page BE-170).

NG

Replace the door lock assembly.

OK

**3** Check wireharness and connector between double locking switch and rear door LH ECU (See page N-35).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1395).