


Trigger switch circuit

CIRCUIT DESCRIPTION

The trigger switch is built in the outside handle.

The rear left door ECU is detects the condition of the trigger switch.

WIRING DIAGRAM

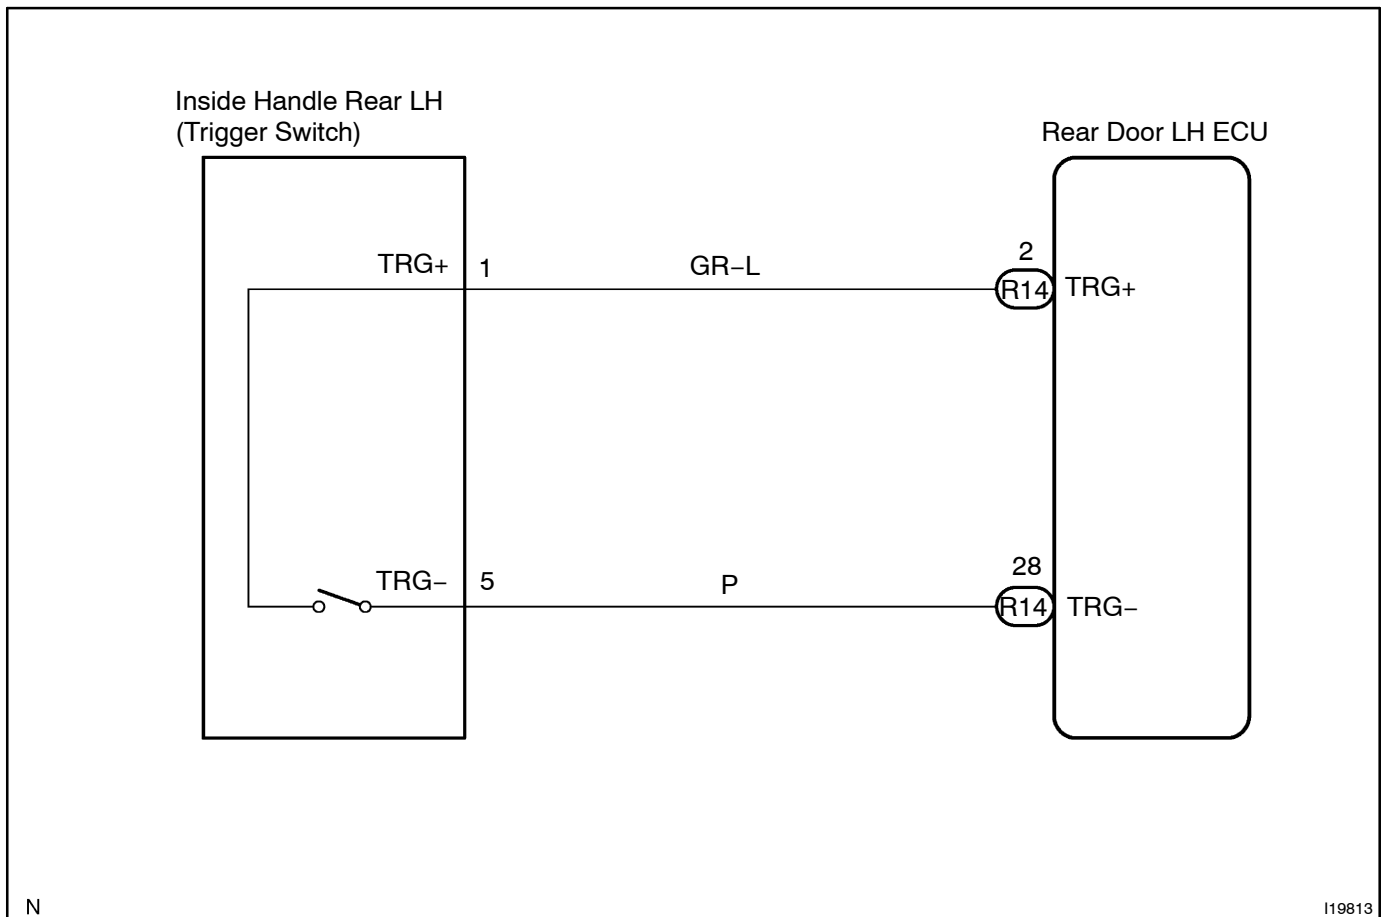

INSPECTION PROCEDURE**HINT:**

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1 Check trigger switch using LEXUS hand-held tester.

PREPARATION:

Connect the LEXUS hand-held tester to DLC3.

CHECK:

Check the trigger switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1395).

NG

2 Check wireharness and connector between trigger switch and rear door LH ECU (See page IN-35).

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page DI-1395).