

**PROBLEM SYMPTOMS TABLE****POWER WINDOW CONTROL SYSTEM:**

Symptom	Suspect Area	See page
Rear left side power window does not operate.	1. Power window motor circuit 2. Rear right door control ECU	<a href="#">DI-1411</a> <a href="#">IN-35</a>
Jam protection function and auto up or down function does not operate.	1. Jam protection limit switch circuit 2. Jam protection pulse switch circuit 3. Rear right door control ECU 4. Theft deterrent ECU	<a href="#">DI-1397</a> <a href="#">DI-1400</a> <a href="#">IN-35</a> <a href="#">IN-35</a>

**POWER DOOR LOCK CONTROL SYSTEM:**

Symptom	Suspect Area	See page
Rear left side door lock does not operate.	1. Power source circuit 2. Door lock motor circuit 3. Rear right door control ECU 4. Theft deterrent ECU	<a href="#">DI-1405</a> <a href="#">DI-1413</a> <a href="#">IN-35</a> <a href="#">IN-35</a>
Key confinement prevention function cannot be done.	1. Door courtesy switch circuit 2. Door unlock detection switch circuit 3. Rear right door control ECU 4. Theft deterrent ECU	<a href="#">DI-1419</a> <a href="#">DI-1416</a> <a href="#">IN-35</a> <a href="#">IN-35</a>

**DOOR CLOSER SYSTEM:**

Symptom	Suspect Area	See page
Rear left side door closer system does not operate.	1. Power source circuit 2. Door closer motor circuit 3. Door closer position switch circuit 4. Cam position switch circuit 5. Rear right door control ECU	<a href="#">DI-1405</a> <a href="#">DI-1402</a> <a href="#">DI-1425</a> <a href="#">DI-1402</a> <a href="#">IN-35</a>

**DOUBLE LOCKING SYSTEM:**

Symptom	Suspect Area	See page
Rear left side double locking system does not operate.	1. Power source circuit 2. Double locking motor circuit 3. Double locking switch circuit 4. Rear right door control ECU	<a href="#">DI-1405</a> <a href="#">DI-1402</a> <a href="#">DI-1429</a> <a href="#">IN-35</a>

**ILLUMINATION LIGHT SYSTEM:**

Symptom	Suspect Area	See page
Door courtesy light does not light up.	1. Door courtesy light circuit 2. Door courtesy switch circuit 3. Rear right door control ECU	<a href="#">DI-1419</a> <a href="#">DI-1419</a> <a href="#">IN-35</a>
Ashtray light does not light up.	1. Ashtray light circuit 2. Rear right door control ECU	<a href="#">DI-1439</a> <a href="#">IN-35</a>
Inside handle illumination does not light up.	1. Inside handle illumination light circuit 2. Rear right door control ECU	<a href="#">DI-1441</a> <a href="#">IN-35</a>

**OTHERS:**

Symptom	Suspect Area	See page
Light auto turn off system does not make buzzer sound.	1. Door courtesy switch circuit 2. Driver side J/B control ECU 3. Rear right door control ECU	<a href="#">DI-1419</a> <a href="#">IN-35</a> <a href="#">IN-35</a>
Key remainder system does not make buzzer sound.	1. Door courtesy switch circuit 2. Combination meter ECU 3. Rear right door control ECU	<a href="#">DI-1419</a> <a href="#">IN-35</a> <a href="#">IN-35</a>